

Kit 1596

VOLVO 850, 4-dr Sedan, 92-96 / *93-97

VOLVO 850, 5-dr Estate, 93-96


VOLVO 850, 5-dr Wagon, *94-97

VOLVO S70, 4-dr Sedan, 97-00 / *98-00



VOLVO V70, 5-dr Estate, 97-99

VOLVO V70, 5-dr Wagon, *98-00


*North America

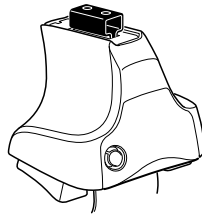

754 Rapid System
480R Rapid Traverse (North America)

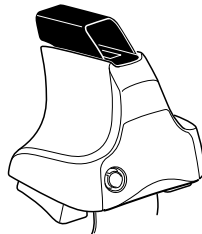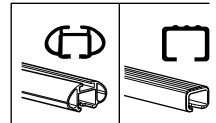

480 Traverse (North America)

 


- 754 Rapid System: x4 (small square block)
- 480R Rapid Traverse (North America): x4 (circular cap)
- 754 Rapid System: x4 (ruler)
- 480R Rapid Traverse (North America): x4 (ruler)
- 754 Rapid System: x4 (main unit)
- 480R Rapid Traverse (North America): x4 (main unit)
- 754 Rapid System: x4 (screwdriver)
- 480R Rapid Traverse (North America): x4 (screwdriver)
- 480 Traverse (North America): x4 (small square block)
- 480 Traverse (North America): x4 (screwdriver)

- (North America): x2 (long bar)
- (North America): x2 (short bar)
- (North America): x2 (short bar)
- (North America): x2 (short bar)
- (North America): x4 (circular cap)
- (North America): x4 (circular cap)
- (North America): x1 (short bar)
- (North America): x2 (short bar)
- (North America): x2 (short bar)
- (North America): x2 (short bar)
- (North America): x2 (short bar)
- (North America): x2 (short bar)
- (North America): x2 (short bar)

- 63 x2 (bracket)
- 78 x4 (bracket)
- 11 x1 (bracket)
- 12 x1 (bracket)
- 15 x2 (bracket)
- Diagram showing a car with four quadrants: RR (Rear Right), FR (Front Right), FL (Front Left), and RL (Rear Left).



1

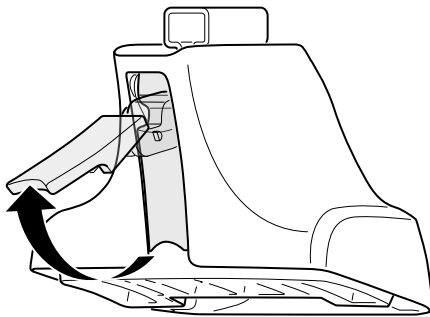


2





754 Rapid System
480R Rapid Traverse
(North America)

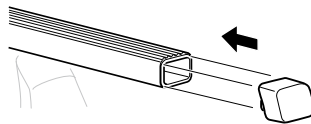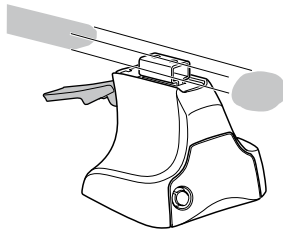

x4

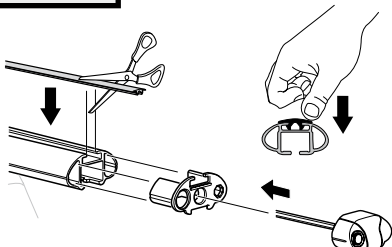



x4

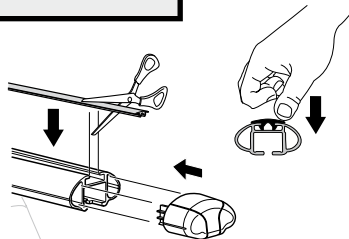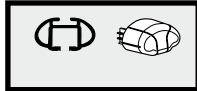



x4




480 Traverse
(North America)

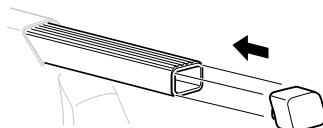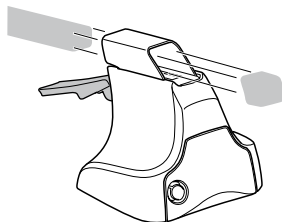


x4

 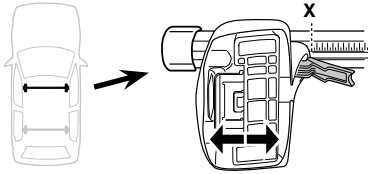3**754** Rapid System


	X
VOLVO 850 , 4-dr Sedan, 92-96 / *93-97	47,5
VOLVO 850 , 5-dr Estate, 93-96	46,5
VOLVO 850 , 5-dr Wagon, *94-97	46,5
VOLVO S70 , 4-dr Sedan, 97-00 / *98-00	47,5
VOLVO V70 , 5-dr Estate, 97-99	46,5
VOLVO V70 , 5-dr Wagon, *98-00	46,5

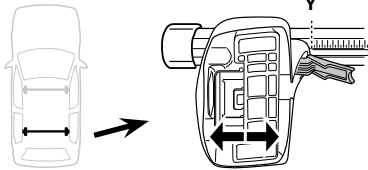


	Y
VOLVO 850 , 4-dr Sedan, 92-96 / *93-97	41,5
VOLVO 850 , 5-dr Estate, 93-96	42
VOLVO 850 , 5-dr Wagon, *94-97	42
VOLVO S70 , 4-dr Sedan, 97-00 / *98-00	41,5
VOLVO V70 , 5-dr Estate, 97-99	42
VOLVO V70 , 5-dr Wagon, *98-00	42









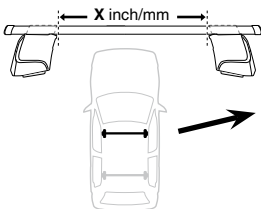
3**480R** Rapid Traverse**480** Traverse**(North America)**

	X inch	X mm
VOLVO 850 , 4-dr Sedan, 92-96 / *93-97	44 ³ / ₈ "	1126 mm
VOLVO 850 , 5-dr Estate, 93-96	43 ⁷ / ₈ "	1116 mm
VOLVO 850 , 5-dr Wagon, *94-97	43 ⁷ / ₈ "	1116 mm
VOLVO S70 , 4-dr Sedan, 97-00 / *98-00	44 ³ / ₈ "	1126 mm
VOLVO V70 , 5-dr Estate, 97-99	43 ⁷ / ₈ "	1116 mm
VOLVO V70 , 5-dr Wagon, *98-00	43 ⁷ / ₈ "	1116 mm

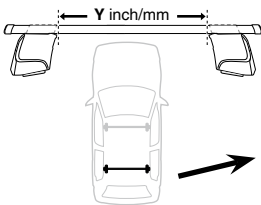


	Y inch	Y mm
VOLVO 850 , 4-dr Sedan, 92-96 / *93-97	42 "	1066 mm
VOLVO 850 , 5-dr Estate, 93-96	42 ¹ / ₈ "	1071 mm
VOLVO 850 , 5-dr Wagon, *94-97	42 ¹ / ₈ "	1071 mm
VOLVO S70 , 4-dr Sedan, 97-00 / *98-00	42 "	1066 mm
VOLVO V70 , 5-dr Estate, 97-99	42 ¹ / ₈ "	1071 mm
VOLVO V70 , 5-dr Wagon, *98-00	42 ¹ / ₈ "	1071 mm

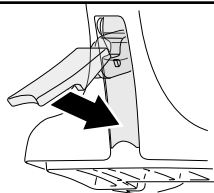
4

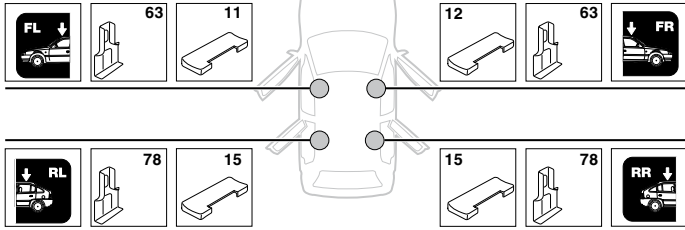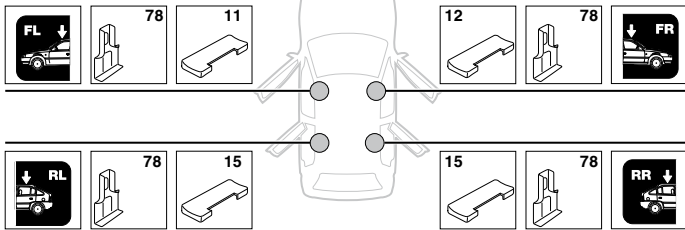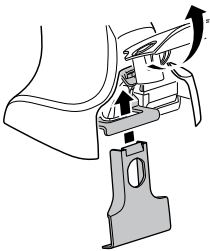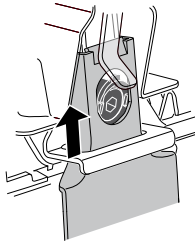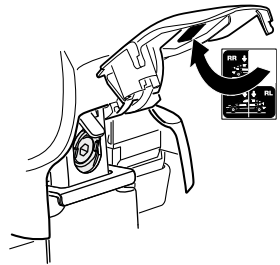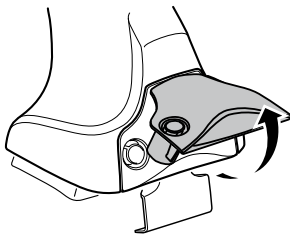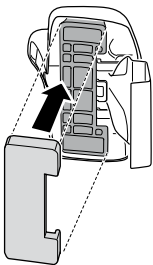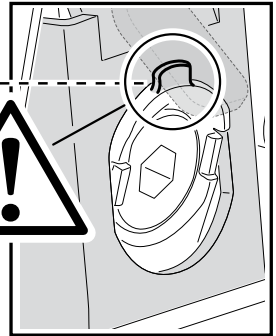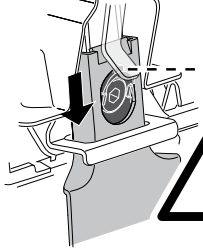5**VOLVO 850, 4-dr Sedan, 92-96 / *93-97****VOLVO S70, 4-dr Sedan, 97-00 / *98-00****VOLVO 850, 5-dr Estate, 93-96****VOLVO 850, 5-dr Wagon, *94-97****VOLVO V70, 5-dr Estate, 97-99****VOLVO V70, 5-dr Wagon, *98-00****A****B****C**


6

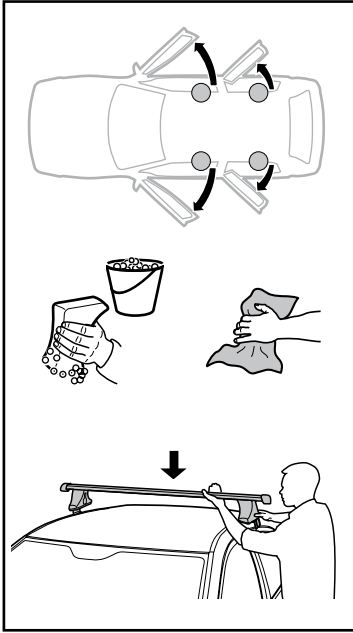








i

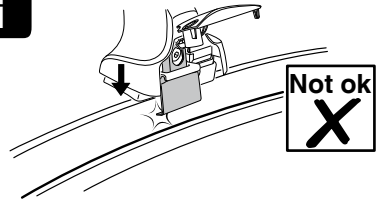



A

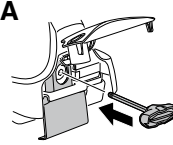

B

  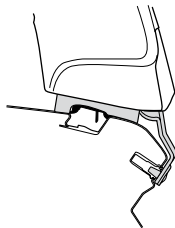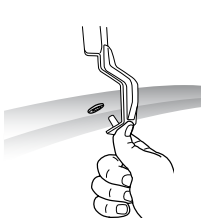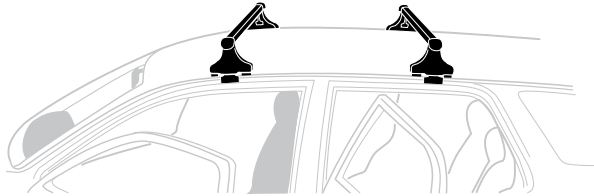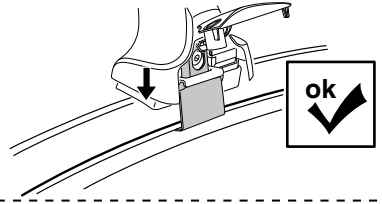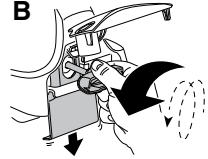


63

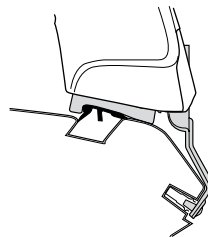 

78



7

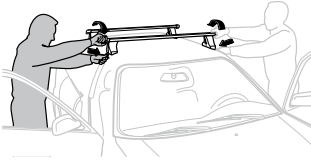

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно





CZ Pokręťta bagazníka dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγεται εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧



한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชั้้นในแบบสลับ

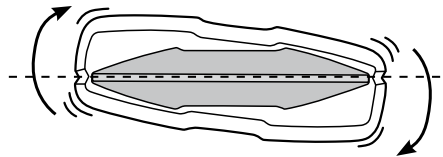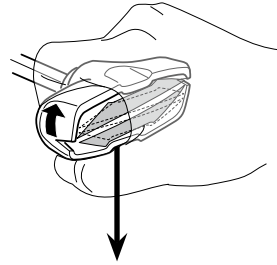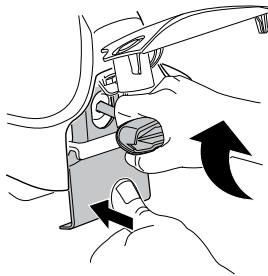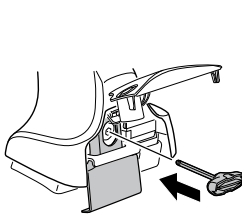


≈ 3 Nm

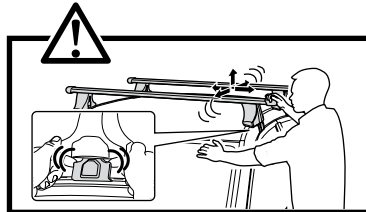
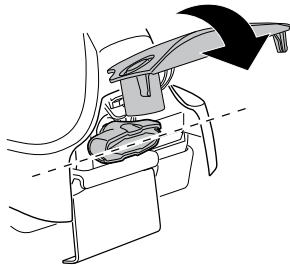


8




x1
17 mm

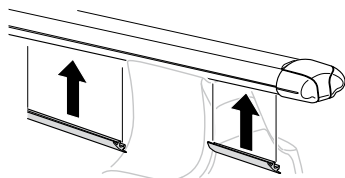

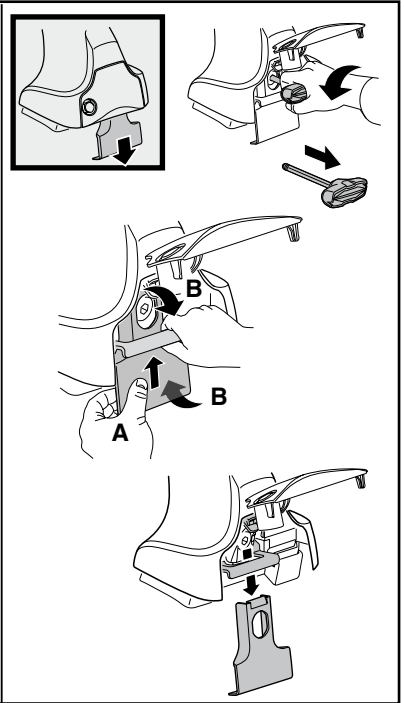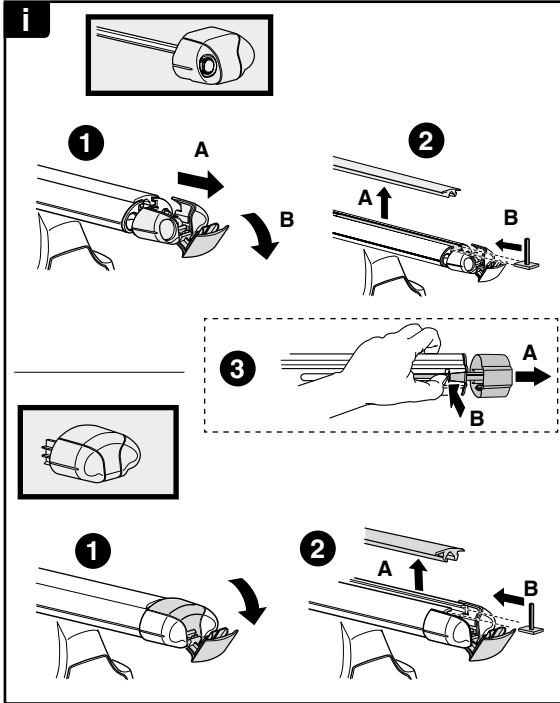

THULE
SWEDEN
**ONE
KEY
SYSTEM**

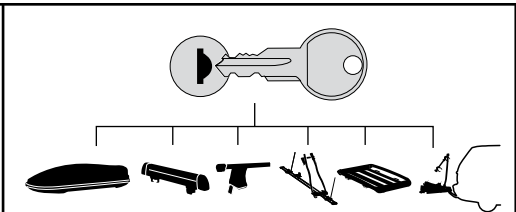

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com