


Important: Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the roof racks are installed in the

correct locations.

Check the contents of kit before commencing fitment and report any discrepancies.

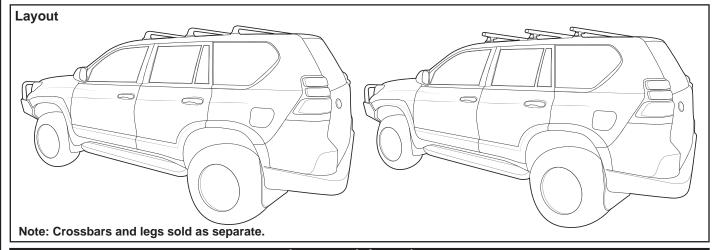

Important Information

| 1. 🔲 | Check Part No./Kit is correct | 3.□ | Fit roof rack accessor |
|------|-------------------------------|-----|------------------------|
|------|-------------------------------|-----|------------------------|

2. Read through instruction before installing 4. Check and recheck all fasteners are secure

Maximum carrying capacity: 100kg evenly distributed over the three (3) cross bars. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before beginning. Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your cross bars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the cross bars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible. Please remove roof racks when putting vehicle through an automatic car wash.

Use only non-stretch fastening ropes or straps.

Sensitivity to cross winds, behaviour in curves and braking:

The handling characteristics of the vehicle, changes when you transport a load on the roof. For safety reasons, we recommend you exercise extreme care when transporting wind-resisting loads; special consideration must be taken into account when braking.

Please remove cross bars when putting vehicle through an automatic car wash.

Load rating:

Maximum permissible load is 100kg on 3 cross bars (include the weight of the roof racks, 7.5kg). When cross bars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit. (66kg for off-road use). Although the roof racks are tested and approved to AS1235-2000, Australian road conditions can be much more rigorous. However, increasing the number of cross bars does not increase the vehicles maximum permissible roof loading.

Note for Dealers and Fitters:

It is your responsibility to ensure instructions are given to the end user or client

Rhino-Rack

3 Pike Street, Rydalmere,

NSW 2116, Australia. Document No: R1325
(Ph) (02) 9638 4744 Prepared By: Kayle Everett
(Fax) (02) 9638 4822 Authorised By: Chris Murty


Authorised By: Chris Murty Issue Date: 10/04/2017


These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.


Fit Time: 30 min

Issue No: 01




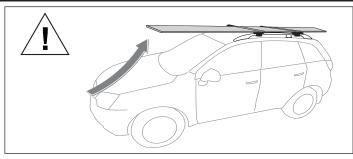


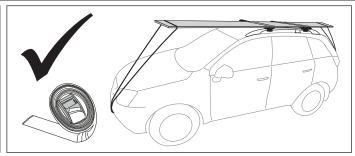

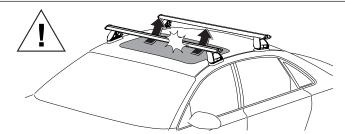




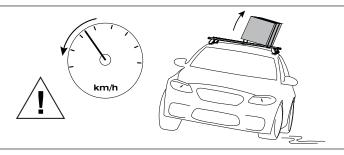

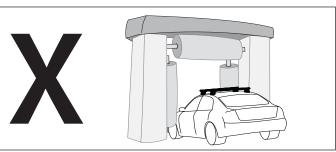





Ensure Ladder is well supported on the ground to help support tent. Take extreme caution when climbing heights above 1.2m/4ft.

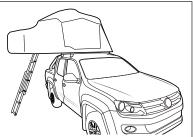

It is required for Clam Shell Roof
Top Tents to use a 3
Crossbar System.

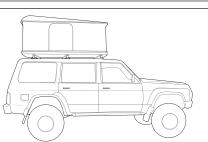

When these roof racks are to be used on a vehicle that is driven off sealed roads the maximum load rating must be divided by 1.5. Remember to subtract the weight of the roof racks to determine your maximum permissible load capacity.

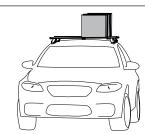


2-3 bars 100kg (220lbs) load rating (Urban road) 2-3 bars 66kg (145lbs) load rating (Off road)


Load rating not taking into account crossbar weight - 5kg




WARNING! Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roofracks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roofracks or the canopy roofracks.

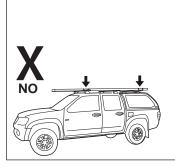

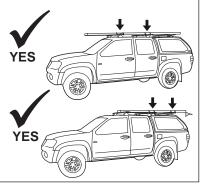


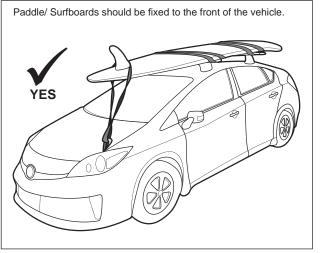



Parts List

| Item | Component | F | M | R | 3 Bar | Part No. |
|------|---------------------------------|---|---|---|-------|----------|
| 1 | M8 x 40mm Socket Screw | 4 | 4 | 4 | 12 | B162 |
| 2 | M8 Spring Washer | 4 | 4 | 4 | 12 | W019 |
| 3 | M8 Flat Washer | 4 | 4 | 4 | 12 | W043 |
| 4 | M6 x 30mm Hex Setscrew | 2 | 2 | 2 | 6 | B202 |
| 5 | M6 Spring Washer | 2 | 2 | 2 | 6 | W004 |
| 6 | M6 x 16mm Flat Washer | 2 | 2 | 2 | 6 | W031 |
| 7 | Cover Plate | 2 | 2 | 2 | 6 | M126 |
| 8 | 5mm Allen Key | 1 | 1 | 1 | 1 | H021 |
| 9 | Front Left Mount Pad | 1 | - | - | 1 | M389 |
| 10 | Front Right Mount Pad | 1 | - | - | 1 | M390 |
| 11 | Middle Left Mount Pad | - | 1 | - | 1 | M391 |
| 12 | Middle Right Mount Pad | - | 1 | - | 1 | M392 |
| 13 | Rear Left Mount Pad | - | - | 1 | 1 | M393 |
| 14 | Rear Right Mount Pad | - | - | 1 | 1 | M394 |
| 15 | Left Pad Mount Skirt | 1 | 1 | 1 | 3 | M395 |
| 16 | Right Pad Mount Skirt | 1 | 1 | 1 | 3 | M396 |
| 17 | 6mm Allen Key | 1 | 1 | 1 | 1 | H009 |
| 18 | O-Ring | 4 | 4 | 4 | 12 | C299 |
| 19 | Sealing Plate | 2 | 2 | 2 | 6 | C588 |
| 20 | M6 Washer (used on cover plate) | 2 | 2 | 2 | 6 | W003 |
| 21 | Fitting Instruction | 1 | 1 | 1 | 1 | R1325 |

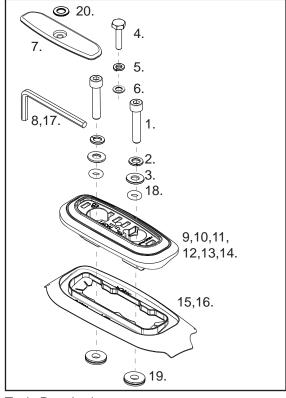


Tools Required: 5mm/6mm security allen key.10,13mm socket wrench. Flat blade screw driver.

Instructions

1

Remove the roof trim covers with a flat blade screwdriver carefully. Remove all brackets, bolts and washers using a 13mm socket. Store the covers and attachment hardware for future use if needed.


NOTE: The existing bolts and washers are not used to fit the roof rack mounting pads.

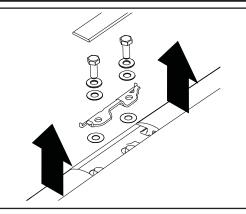


2


Place the foam covered mounting pad washers (item 24) over the plastic tubes in the roof channel. Make sure they are fitted neatly around the plastic tubes.

 NOTE: Failure to fit the foam covered copper washers will result in water leaks.



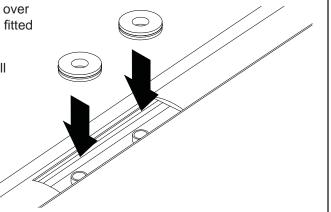



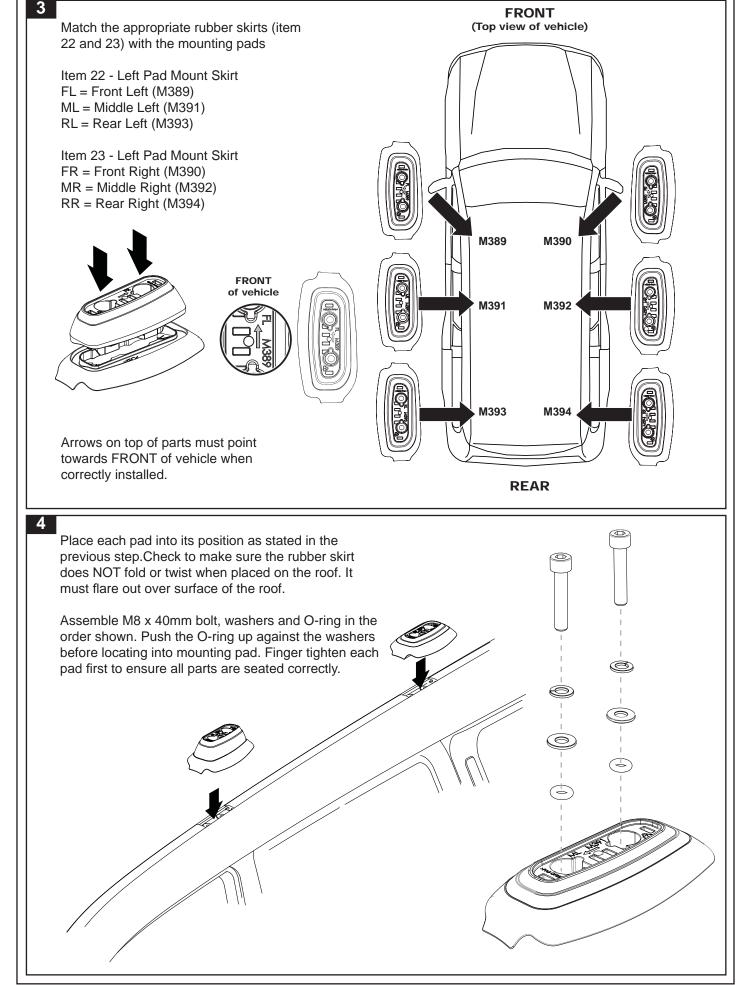




5

Tighten all M8 bolts using the 6mm allen key supplied.


Recommended tightening torque 9-10 Nm. DO NOT OVER TIGHTEN.

Fit crossbars as per corresponding instructions and using the M6 x 27mm screws included.

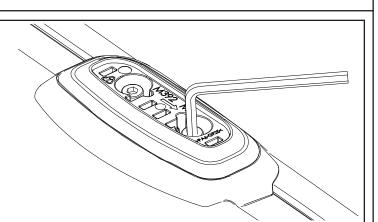

When crossbars

When crossbars are not in use, remove and install the cover plates provided. Use the M6 x 30mm hex setscrew within this kit.

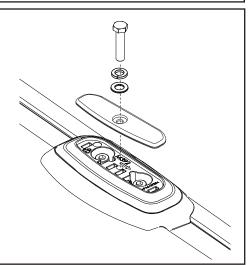




RHINO-RACK | PIONEER NG VEHICLE FITTING INFORMATION

| VEHICLE | PIONEER SIZE | CONNECTOR |
|-------------------------|--------------|-----------|
| TOYOTA Prado 150 Series | 52107 | RCH6 |

IMPORTANT NOTES

| REGION | AUS | NZ | USA | CA | EU | SA | ZA |
|---------------|-----------------|----|-----|----|----|----|----|
| AVAILABILITY | ✓ | ✓ | | | ✓ | | ✓ |
| RUNNING DATES | Mar-03 - Nov-09 | - | - | - | - | - | - |

UNDERBAR SPACING

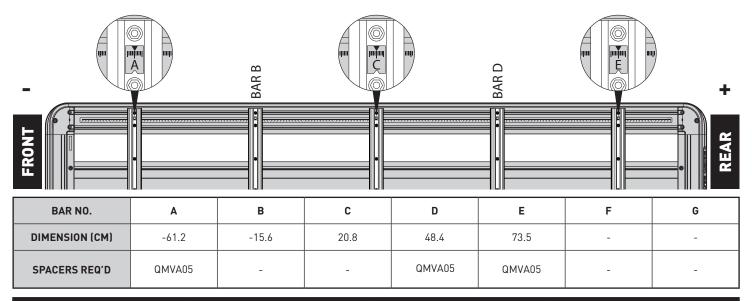

| VEHICLE LOAD LIMIT (kgs / lbs) | SYSTEM WEIGHT (kgs / lbs) PLATFORM + CONNECTOR | ON-ROAD CARGO ALLOWANCE (kgs / lbs) | OFF-ROAD CARGO s) ALLOWANCE (kgs / lbs) | |
|--------------------------------|--|--|--|--|
| 80 / 176.4 | 32.2 / 71 | 47.8 / 105.4 | 31.9 / 70.3 | |

NOTES FOR DEALERS / FITTERS

It is your responsibility to ensure these fitting instructions are given to the end user or client.

Document No: R2309 Issue No: 0 Issue Date: 21/10/2019

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

rhinorack.com.au Page 1 of 1