


# Long Gutter Mount Backbone (Flat) RGMB1

#### Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

### Fit Time: 30 min

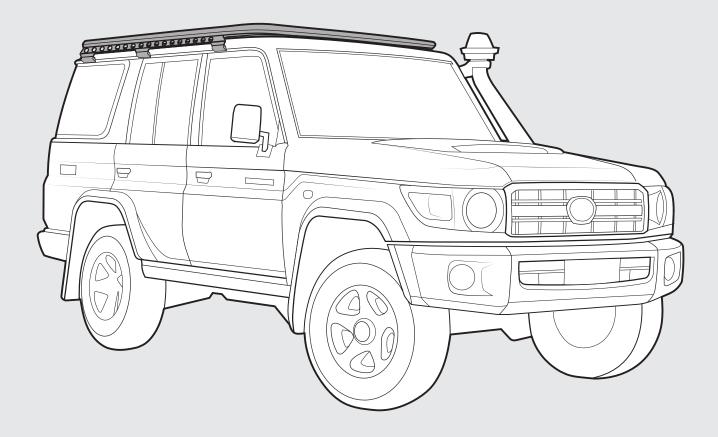

#### Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766 (02) 8846 1900 rhinorack.com.au

#### Rhino-Rack USA

Unit D, 2450 Airport Blvd, Aurora, CO, 80011 877-744-6622 rhinorack.com


#### Rhino-Rack CANADA

19100 Airport Way Pitt Meadows, BC V3Y OE2 rhinorack.ca

Document No: R2732 Issue No: 01 Issue Date: 31/08/2021

# **Carrying Capacity**

Check the website and the vehicle owners hand book for your vehicle manufacturer's maximum carrying capacity. Load must be evenly distrbuted over the system.

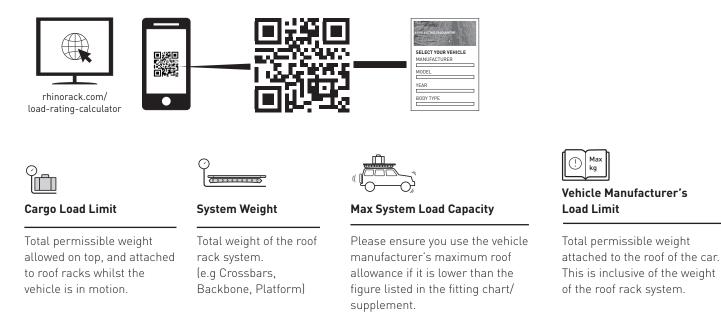

### Warning

- Check part number or kit is correct for use with your vehicle.
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).
- Roof racks must be removed when vehicle is put through an automatic car wash.
- With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.
- Always ensure you fasten your load securely.
- Use only non-stretch fastening ropes or straps to attach cargo to your load.

### In service maintenance checks


- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

#### **Torque Settings**

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings: M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) M10: 16-18Nm (12-13lbs/ft).

### **Note for Dealers and Fitters**


It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

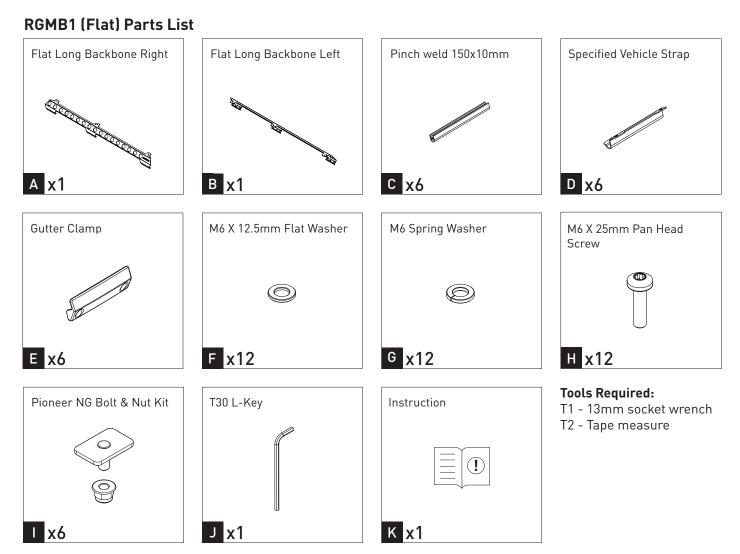


### Note:

- Item I only required with 5XXXX series Pioneer Platforms.
- For installation with 4XXXX Pioneer Platforms, additional kit SUB0836 is required. (Refer to Step 4, pg.5)
- Only use the below specified vehicle strap for your vehicle

### Flat Backbone Identifier

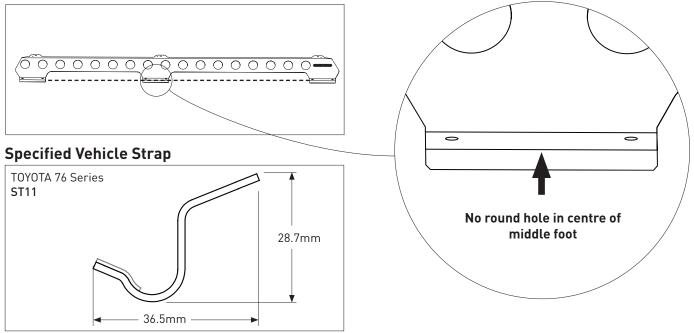

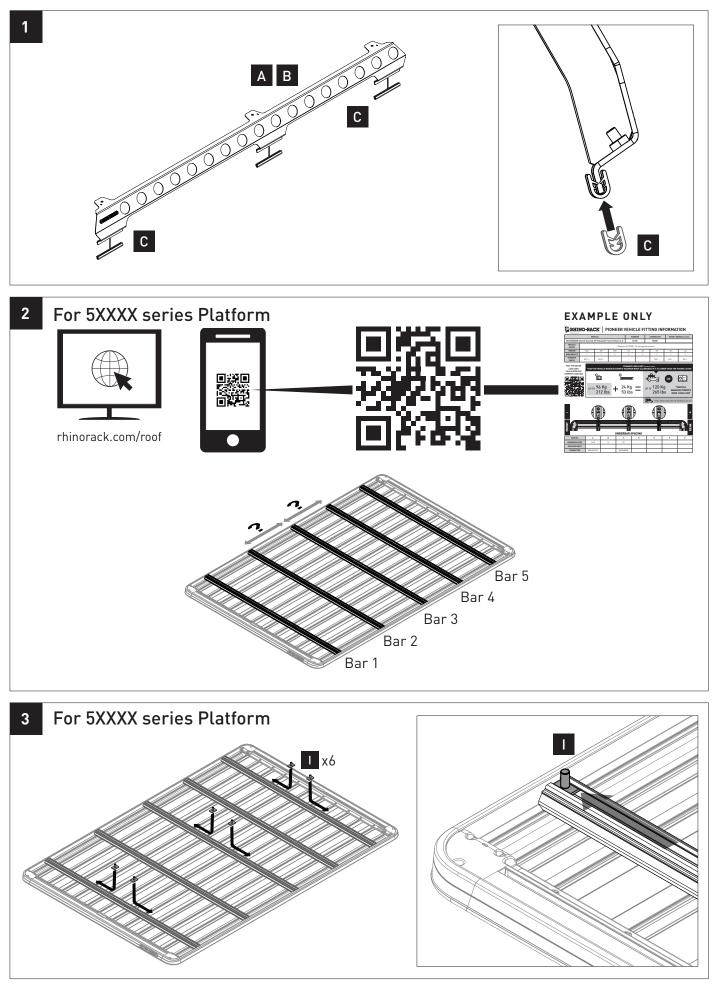

Item

1

2

3

4

5

Description


M8 X 35 Hex Head Screw

M8 Spring Washer S/S

M8 X 24 X 2 Flat Washer S/S Black

Pioneer Leg Height Spacer

M8 Channel Nut

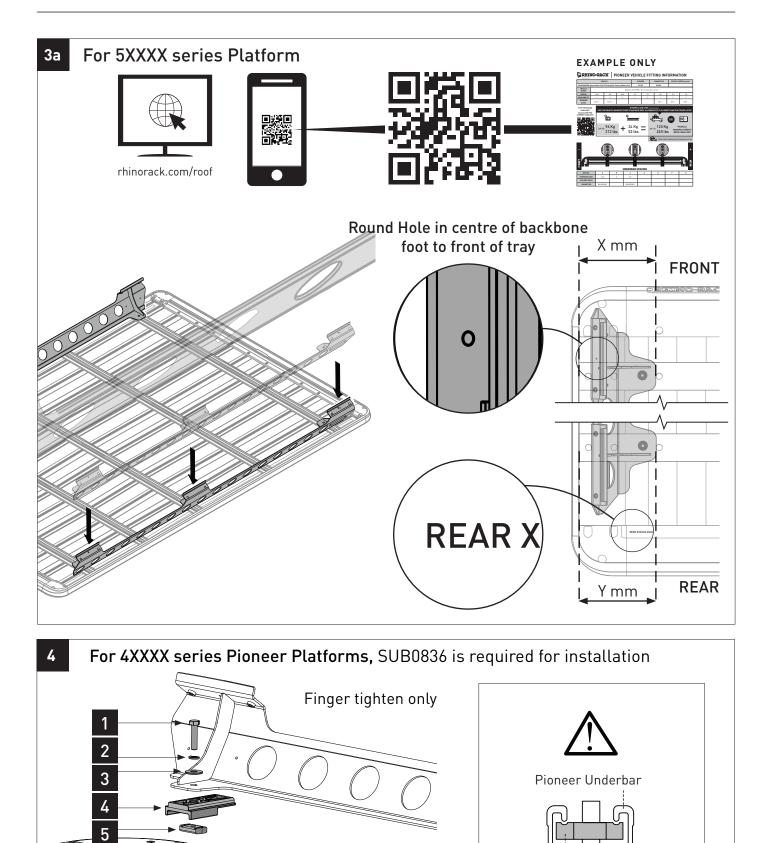

Qty

6

6

6


6

6

Ensure channel nut has rotated within Pioneer underbar and is

fixing Pioneer securely.

# **RGMB1** Instructions

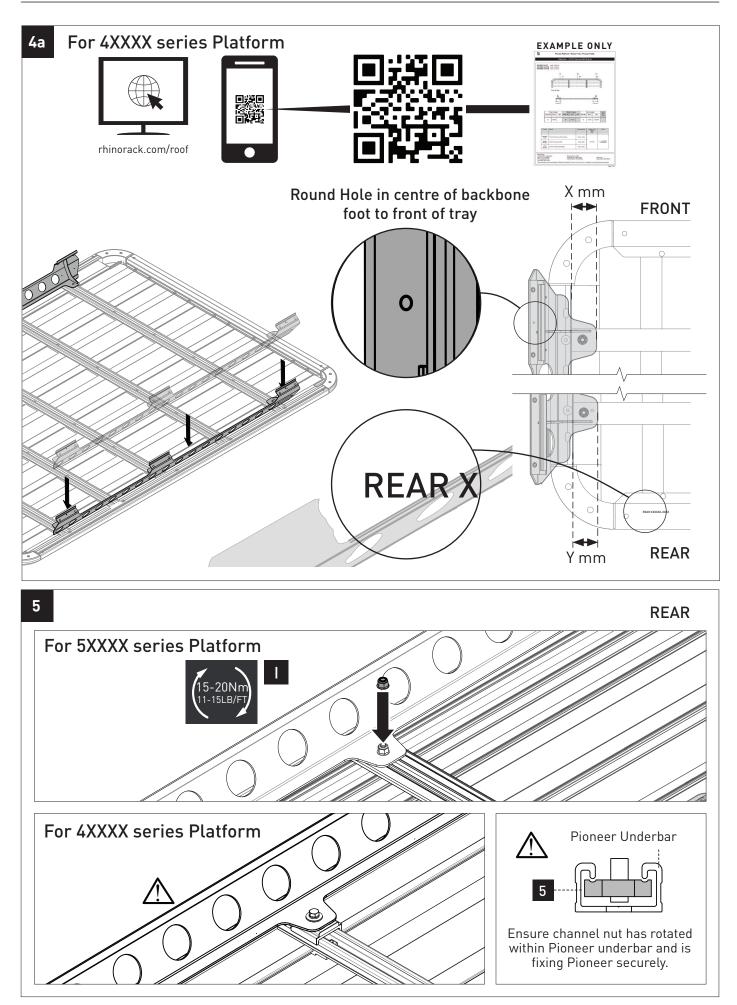

# **RGMB1** Instructions

