

Important Information

Maximum carrying capacity:

On Road Cargo Allowance	Off Road Cargo Allowance	Roof Allowance	Rack Weight
70kg / 154lb	35kg / 77lbs	75kg / 165lbs	5kg / 11lbs

Off Road: Any driven path taken that is not on sealed (tarred / bitumen) and maintained

Roof Allowance: Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system

Cargo Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion

Static Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is stationary

Load must be evenly distributed over the entire system. Weight of roof rack accessories is to be included in cargo allowance.

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings -

M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning:

- · Check the Rhino-Rack website to ensure you have the latest issue of the instructions
- · Check Part No. and / or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions
 regarding fitting to the dealer from where the roof racks were purchased.
- Use only non-stretch fastening ropes or straps.
- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you
 exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and
 braking.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care
 must be taken in off road conditions

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client.

Rhino-Rack, 22 Hanson PI, Eastern Creek

NSW 2766, Australia (02) 8846 1900 rhinorack.com.au

 Document No:
 R1798

 Issue No:
 03

 Issue Date:
 19/08/2019


These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

ROC25 Vortex Crossbar Overhang - RLKVO/H S606 to be used.

Page 2 of 8





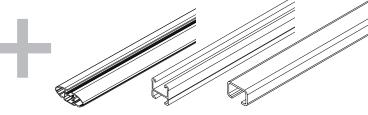


Leg kit

DK Pad & clamp kit

Vortex, Heavy Duty & Steel Euro Crossbars and adaptor kits


Parts List


Item	Component Name	1 Bar	2 Bar	Part No.
1	Torque Allen Key	1	1	TORKEY-L
2	M8 Pivot Nut	2	4	N047
3	M8 x 57mm Attachment Bolt	2	4	B154
4	Cover Plate Standard	2	4	M885
5	ROC25 Leg Overhang	2	4	M884
6a	Key and Barrel	2	2	CA1339-BK
6b	Barrel	2	2	CA1339-B
7	Arrow Label	2	4	S364
8	Leg Location Label	2	4	S365
9	Base	2	4	M311
10	M6 Nut 24x 24 x 4mm	2	4	N068
11	M6 Flat Washer	2	4	W031
12	M6 Spring Washer	2	4	W004
13	M6 x 20mm Skt Head Screw	2	4	B054
14	Fitting Instruction	1	1	R1798

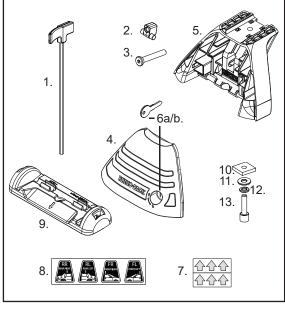


Note: Crossbars require purchase of leg kit, pad/ DK clamp kit and VA crossbars.


Instructions

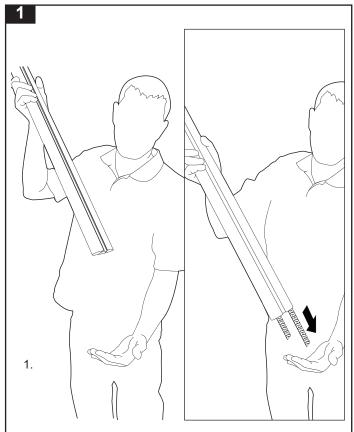


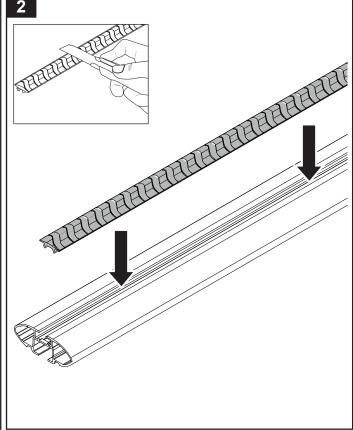

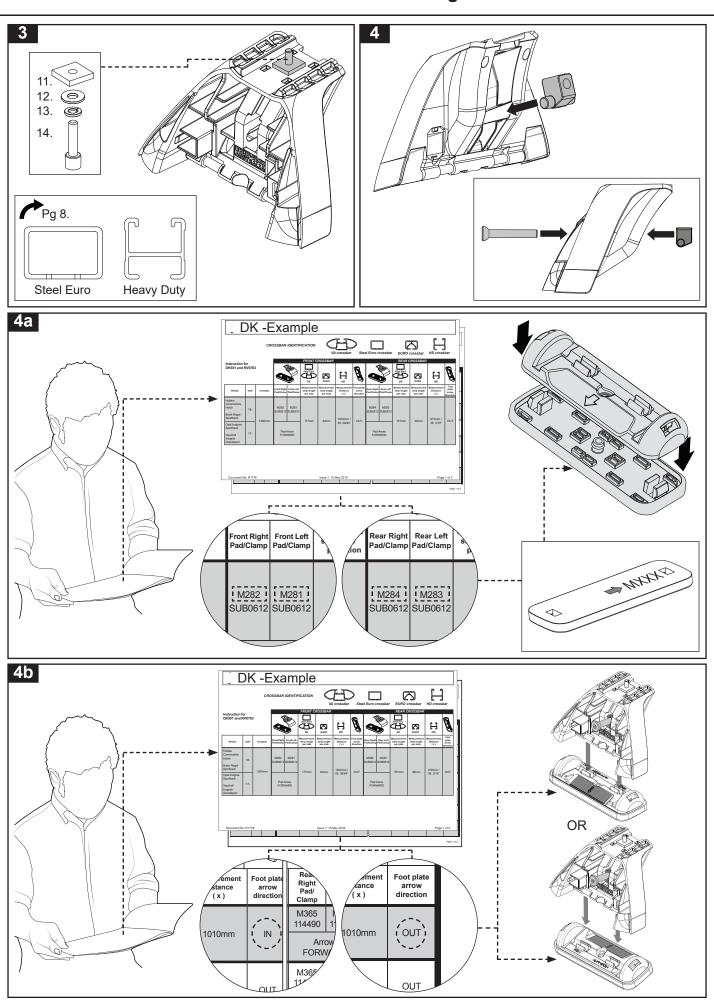

Page 4 of 8

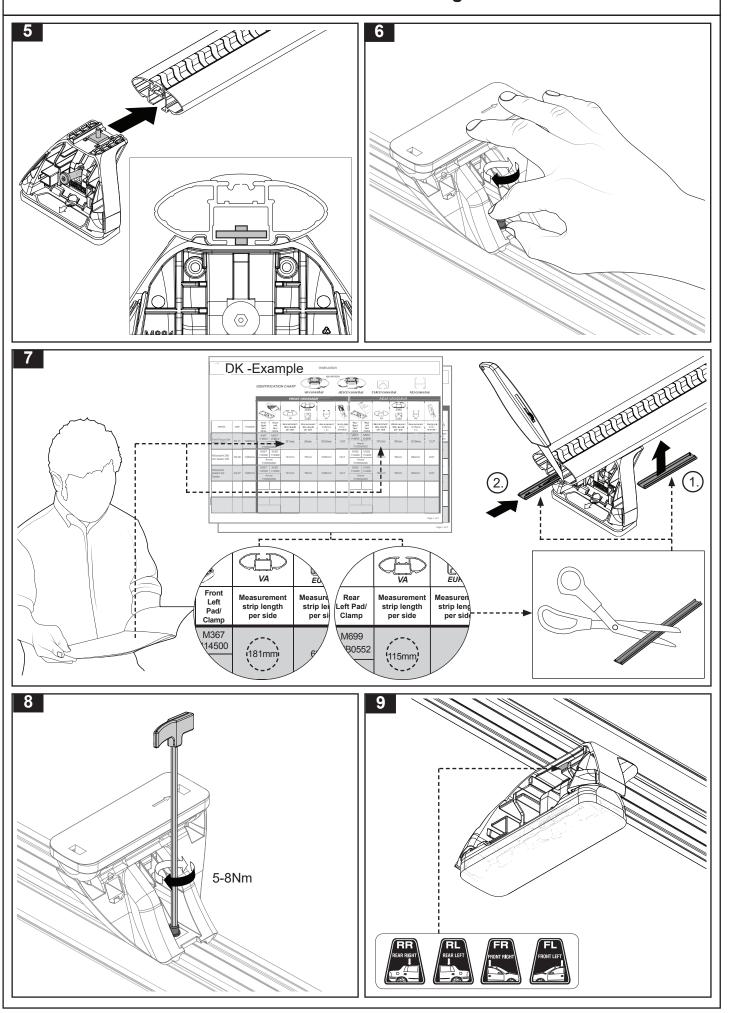

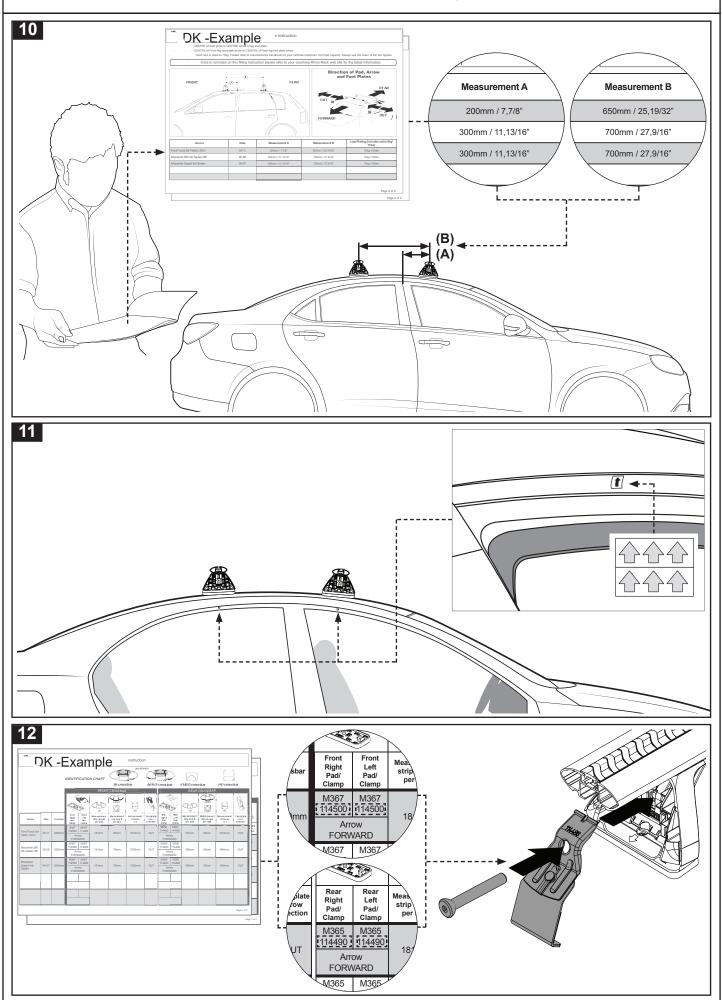

ROC25 Vortex Crossbar Overhang - RLKVO/H 13 (4-5Nm). 15 61mm 52mm OR M886 M885 16 17

