
RHINO-RACK

Mitsubishi Triton Backbone RMTB1

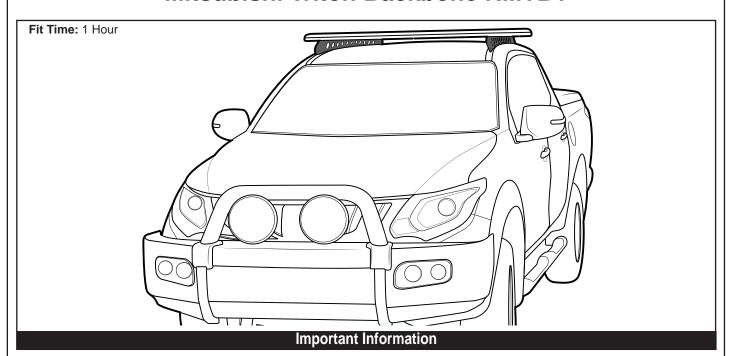

Maximum carrying capacity:

| | Suitable Pioneers | On Road Cargo Allowance | Off Road Cargo Allowance | Static Allowance | Roof Allowance | Rack Weight |
|---|----------------------|----------------------------|-----------------------------|------------------|----------------|---------------|
| | 42100B | 74.5kg / 164lb | 54.5kg / 120lb | 334.5kg / 737lb | | 25.5kg / 56lb |
| ſ | 45100B | 72.5kg / 160lb | 52.5kg / 116lb | 332.5kg / 733lb | 100kg /220lb | 27.5kg / 61lb |
| ſ | 41100 | 70kg / 155lb | 50kg / 110lb | 330kg / 728lb | | 30kg / 66lb |

Roof Allowance: Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system

Cargo Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion

Static Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is stationary

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed over the entire Pioneer. Weight of roof rack accessories is to be included in cargo allowance.

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings - M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning:

- Check Part No. and/ or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Use only non-stretch fastening ropes or straps.
- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you
 exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and
 braking.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care
 must be taken in off road conditions

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client Rhino-Rack. 3 Pike St. Rydalmere

NSW 2116, Australia (02) 8846 1900


rhinorack.com.au


 Document No:
 R1202


 Prepared By:
 Kayle Everett
 Issue No:
 06

 Authorised By:
 Chris Murty
 Issue Date:
 12/07/2018


These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

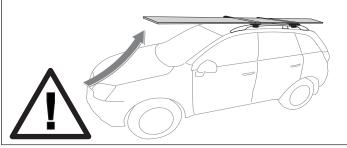


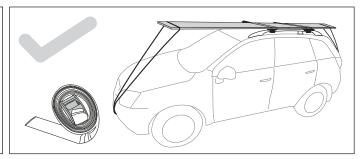

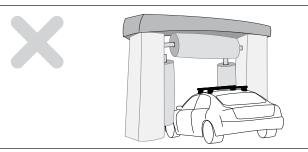




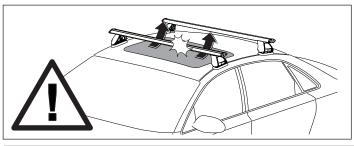

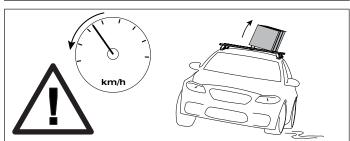



The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.


Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care must be taken in off road conditions

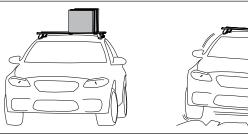




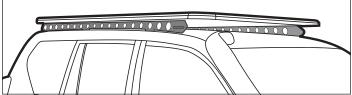


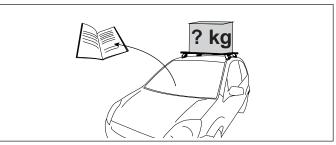

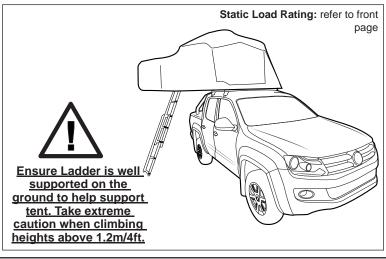


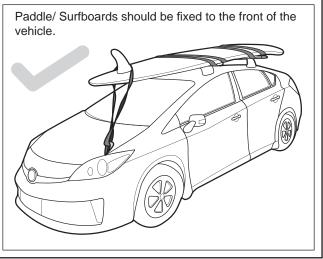



Parts List

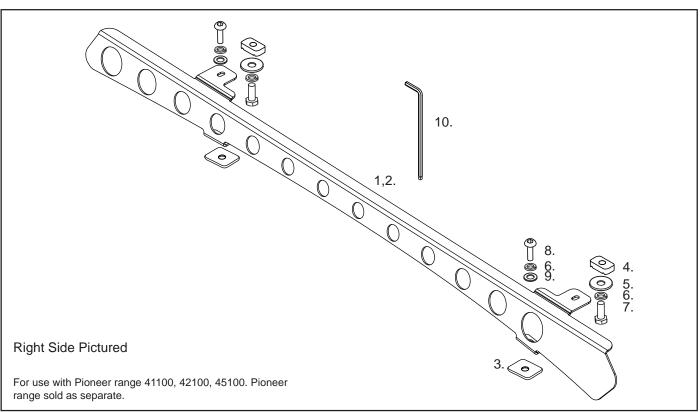



| Item | RTLB1 Kit | Qty | Part No. |
|------|-------------------------|-----|----------|
| 1 | Triton Left Rail | 1 | CA1515 |
| 2 | Triton Right Rail | 1 | CA1516 |
| 3 | Butyl Patch 40mm x 25mm | 4 | CA1260 |
| 4 | M8 Channel Nut | 4 | N003 |
| 5 | M8x19x2.5 Flat Washer | 4 | W043 |
| 6 | M8 Spring Washer | 8 | W019 |
| 7 | M8x20 Hex Setscrew | 4 | B020-BLK |
| 8 | M8x16 Dome Head Screw | 4 | B072 |
| 9 | M8x17x2.5 Flat Washer | 4 | W020 |
| 10 | 5mm Ball End Allen Key | 1 | - |
| 11 | Instructions | 1 | R1202 |

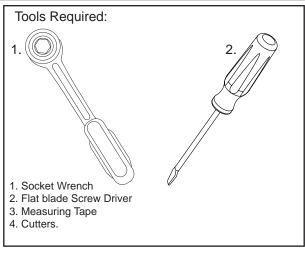


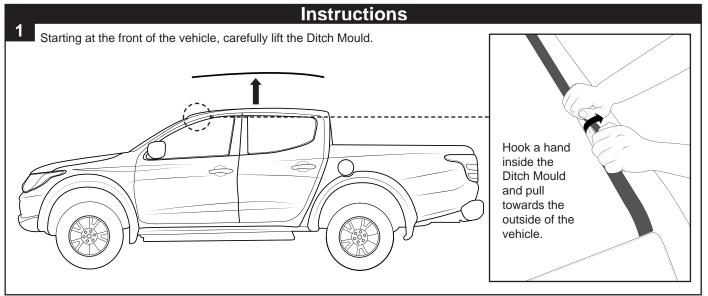

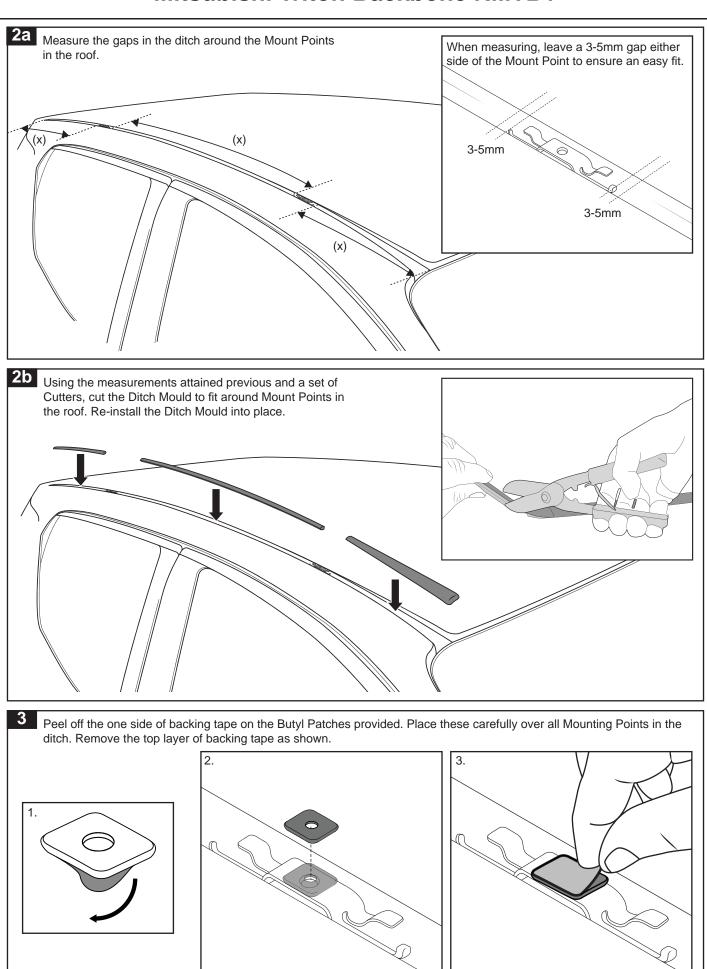

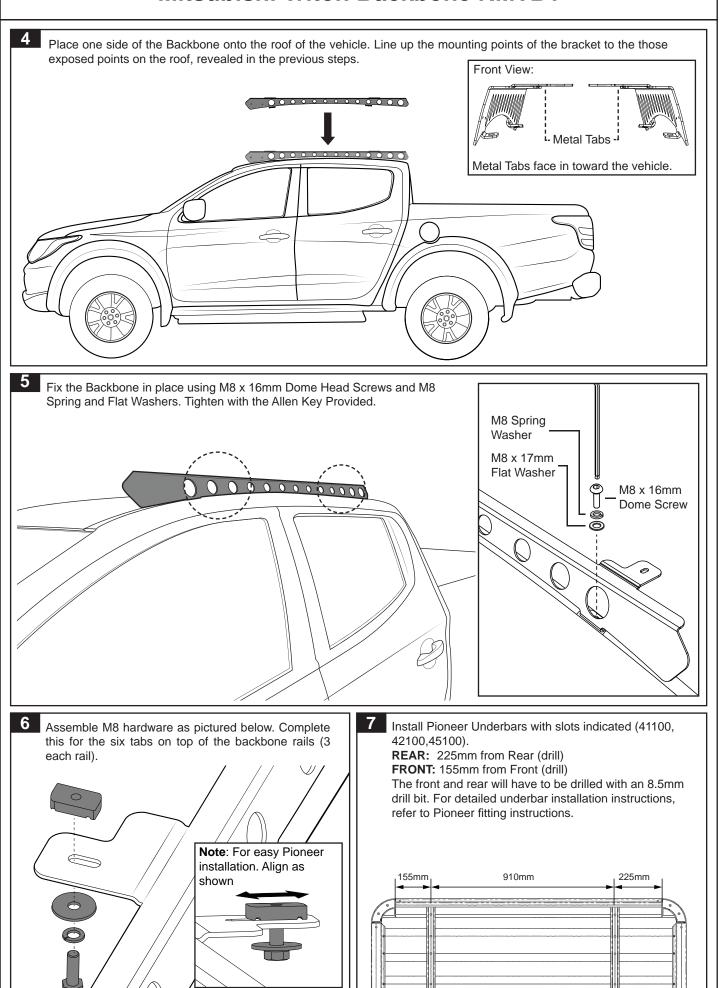

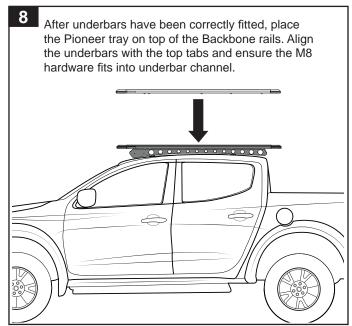

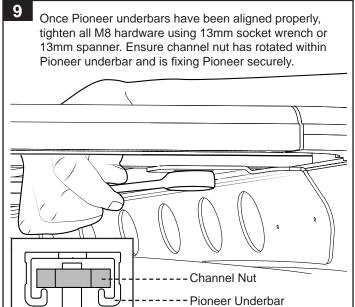



RHINO-RACK | PIONEER NG VEHICLE FITTING INFORMATION


| VEHICLE | PIONEER SIZE | CONNECTOR | |
|---------------------------------------|--------------|-----------|--|
| Mitsubishi Triton MQ/MR Gen 4 Ute 4dr | 52100 | RMTB1 | |

IMPORTANT NOTES

Requires kit SP309

| REGION | AUS | NZ | USA | CA | SA | UK | EU | ZA |
|---------------|----------|----------|-----|----|----|----|----|----|
| AVAILABILITY | ✓ | ✓ | × | × | × | × | × | × |
| RUNNING DATES | Apr-15 - | Apr-15 - | - | - | - | - | - | - |

UNDERBAR SPACING

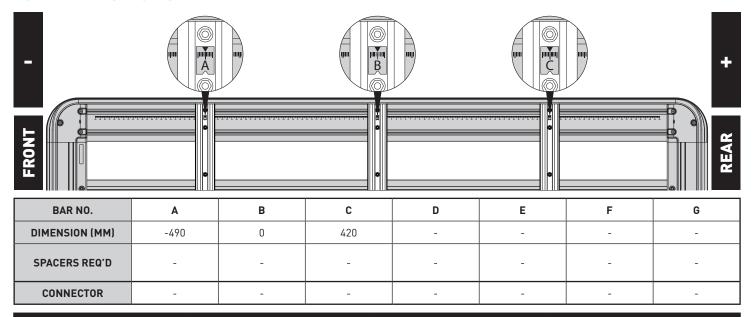

| VEHICLE LOAD LIMIT (kg / lbs) | SYSTEM WEIGHT (kg / lbs) PLATFORM + CONNECTOR | ON-ROAD CARGO ALLOWANCE (kg / lbs) | OFF-ROAD CARGO ALLOWANCE (kg / lbs) | |
|-------------------------------|---|---------------------------------------|--|--|
| 80 / 176.4 | 28 / 60.6 | 53 / 115.7 | 26 / 57 | |

NOTES FOR DEALERS / FITTERS

It is your responsibility to ensure these fitting instructions are given to the end user or client.

Document No: R1965 Issue Date: 11/28/2019

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

rhinorack.com.au Page 1 of 1