


LockNLoad[™] HIGH LIFT JACK HOLDER

FIRST TIME INSTALLATION

- Please read instructions carefully before installation.
- Check the contents of kit. Contact your YAKIMA dealer if any parts appear missing or damaged.
- Clean your Platform prior to fitting the YAKIMA LockNLoad High Lift Jack Holder.
- Place these instructions in the vehicle's glove box after installation is complete.

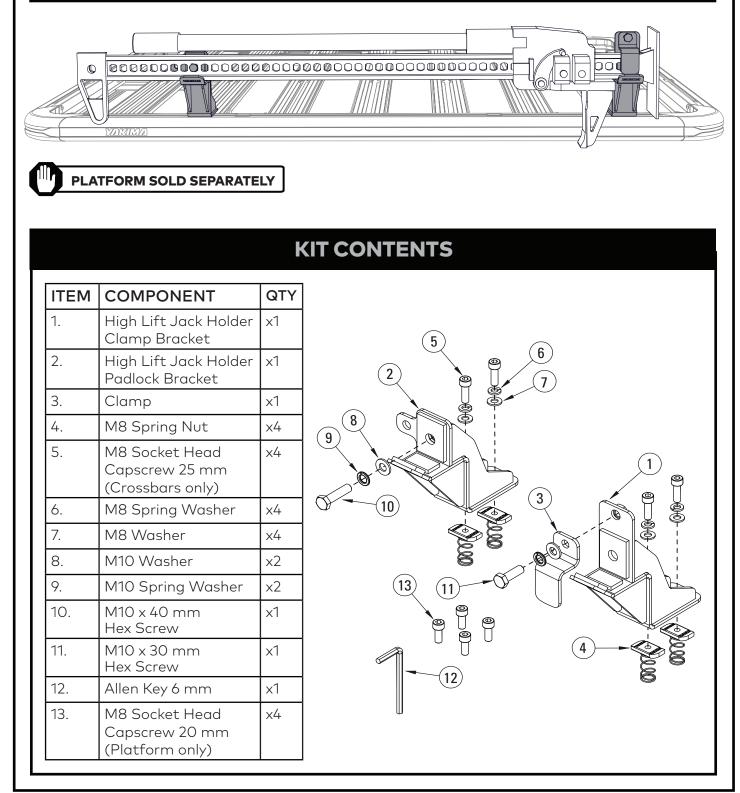

INSTALLATION



INSERT SPRING NUTS - PLATFORM

Insert 4x M8 Spring Nuts into Platform sides and slats via the cut outs as shown. Determine the best slat spacing for the High Lift Jack Brackets based on the length of Jack you will be carrying.

The Spring Nuts do not need to be rotated into place.


INSERT SPRING NUTS - LockNLoad BAR


Insert 4x M8 Spring Nuts into crossbar channels as shown.

Push Spring Nuts down into crossbar channels and twist to lock into place.




Slide Spring Nuts along channels so they are positioned as close to the Platform edge/end of crossbars as possible. The Brackets can be used as a guide for spacing. Ensure nuts are equally spaced as shown. The Allen Key can be used to assist nut movement within channel.

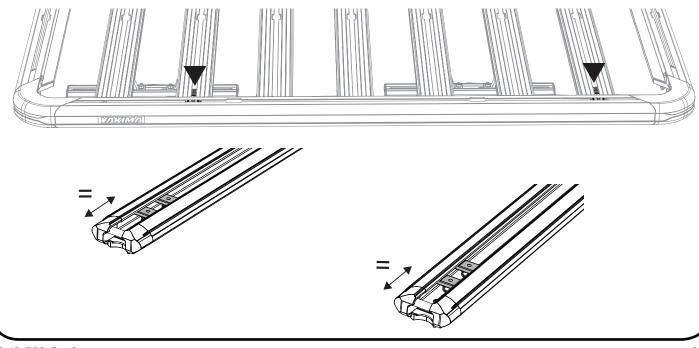

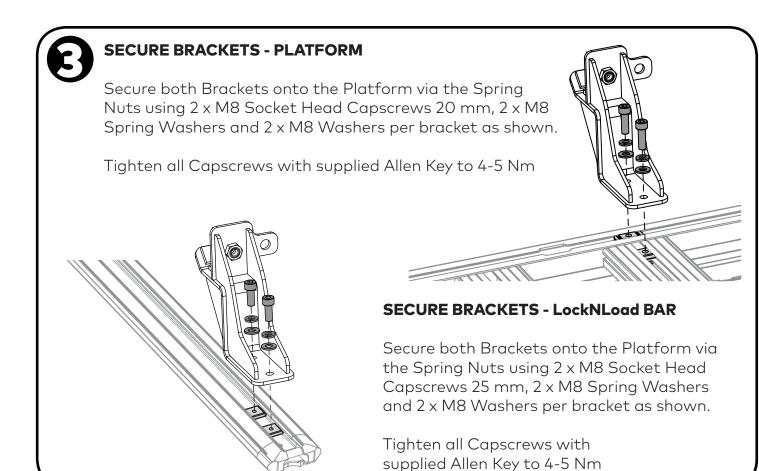




Secure your high lift jack onto the Padlock Bracket using the M10 x 40 mm Hex Screw, M10 Spring Washer and M10 Washer as shown.

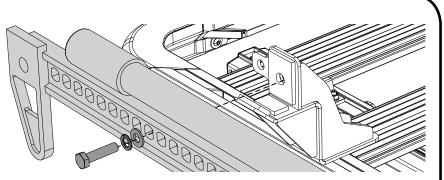

With the high lift jack securely in place, swing the clamp down over the jack arm and tighten the M10 x 30 mm Hex Screw.

The jack can be secured with a padlock (not supplied) as shown for added security.

NOTE - Padlock Bracket shown

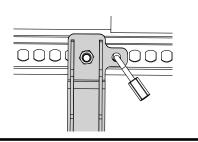



YAKIMA AUSTRALIA PTY. LTD

17 Hinkler Court Brendale, QLD 4500 Australia 1800 143 548

YAKIMA PRODUCTS, INC.

4101 Kruse Way Lake Oswego, OR 97035-2541 USA 888 925 4621