




RHINO-RACK

CONTROLLED

QMVA15

Item	Component Name	Qty	Part No.
1	Quick Mount VA 15mm Spacer	2	M762
2	M6x35 Socket HD Cap Screw	2	B218
3	Instructions	1	R566

Note: Max Spacer height 30mm

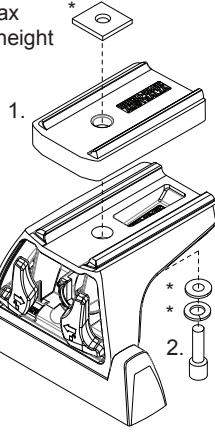

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R566

Prepared: Kayle Everett




RHINO-RACK

CONTROLLED

QMVA15

Item	Component Name	Qty	Part No.
1	Quick Mount VA 15mm Spacer	2	M762
2	M6x35 Socket HD Cap Screw	2	B218
3	Instructions	1	R566

Note: Max Spacer height 30mm

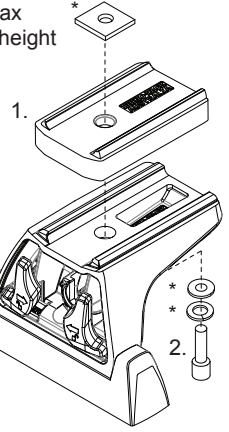

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R566

Prepared: Kayle Everett




RHINO-RACK

CONTROLLED

QMVA15

Item	Component Name	Qty	Part No.
1	Quick Mount VA 15mm Spacer	2	M762
2	M6x35 Socket HD Cap Screw	2	B218
3	Instructions	1	R566

Note: Max Spacer height 30mm

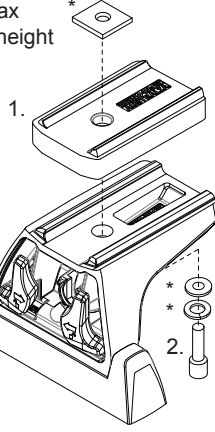

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R566

Prepared: Kayle Everett




RHINO-RACK

CONTROLLED

QMVA15

Item	Component Name	Qty	Part No.
1	Quick Mount VA 15mm Spacer	2	M762
2	M6x35 Socket HD Cap Screw	2	B218
3	Instructions	1	R566

Note: Max Spacer height 30mm

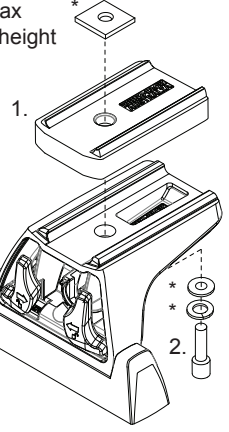

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R566

Prepared: Kayle Everett




RHINO-RACK

CONTROLLED

QMVA15

Item	Component Name	Qty	Part No.
1	Quick Mount VA 15mm Spacer	2	M762
2	M6x35 Socket HD Cap Screw	2	B218
3	Instructions	1	R566

Note: Max Spacer height 30mm

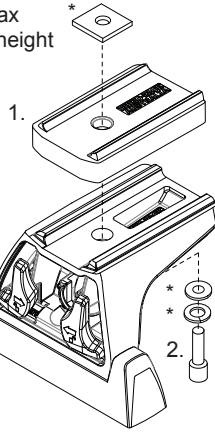

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R566

Prepared: Kayle Everett




RHINO-RACK

CONTROLLED

QMVA15

Item	Component Name	Qty	Part No.
1	Quick Mount VA 15mm Spacer	2	M762
2	M6x35 Socket HD Cap Screw	2	B218
3	Instructions	1	R566

Note: Max Spacer height 30mm

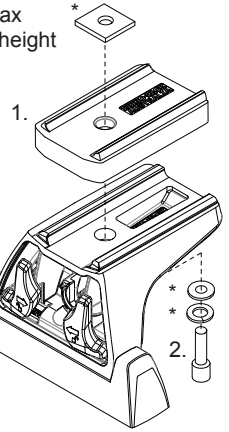

Quick Mount Spacers can be combined to achieve a desired height.

5mm	
10mm	
15mm	
20mm	
25mm	

*Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Issue: 02

Document No: R566

Prepared: Kayle Everett