
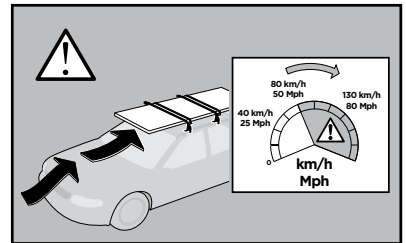
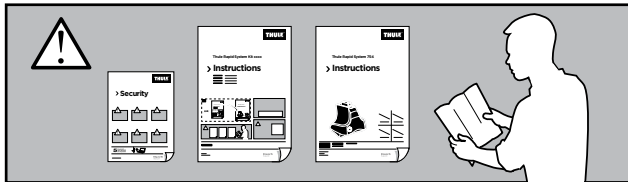
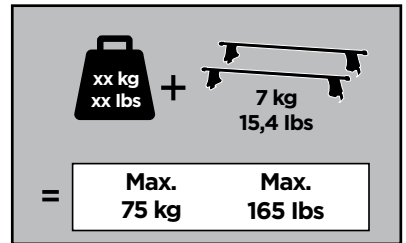


Thule Rapid System Kit 1206

> Instructions

BMW X5, 5-dr Estate, 00-07*

*Without roof rails

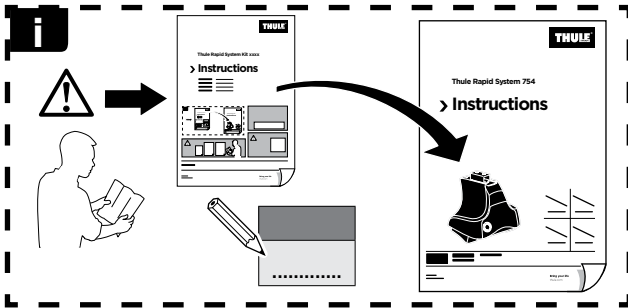

ISO 11154-E

141206


C.20121018
519-1206-01

Bring your life

thule.com




22 x4



222 x4






x1



x1

1


	X (scale)	X (mm)	X (inch)
BMW X5 , 5-dr Estate, 00-07	39,5	1046	41 1/8

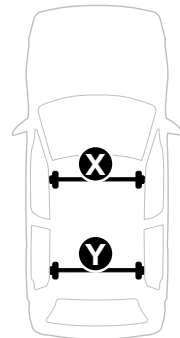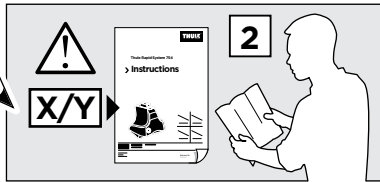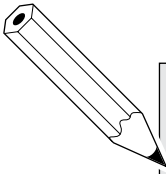

	Y (scale)	Y (mm)	Y (inch)
BMW X5 , 5-dr Estate, 00-07	38	1031	40 5/8

2

BMW X5, 5-dr Estate, 00-07

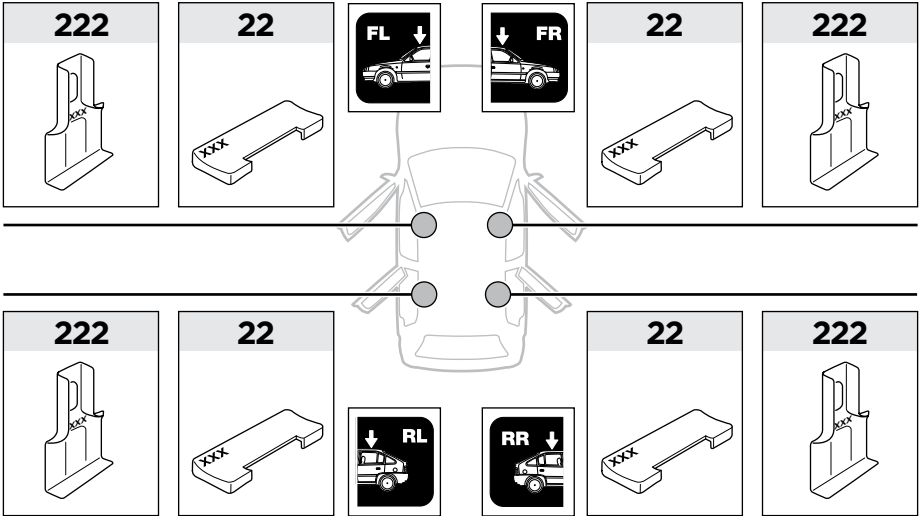

3

