
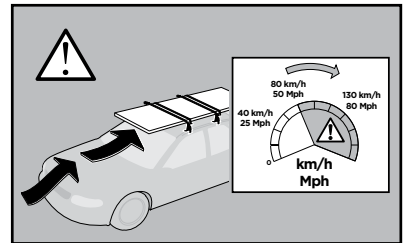
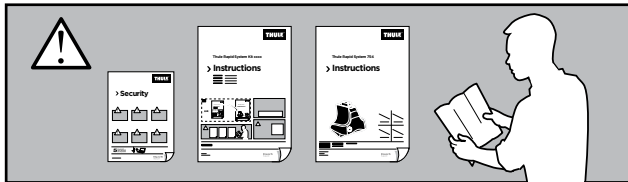
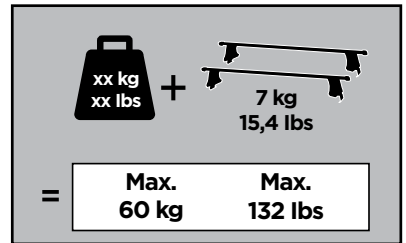


Thule Rapid System Kit 1385

> Instructions


TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-09, 10-
TOYOTA Vanguard, 5-dr SUV, 07-

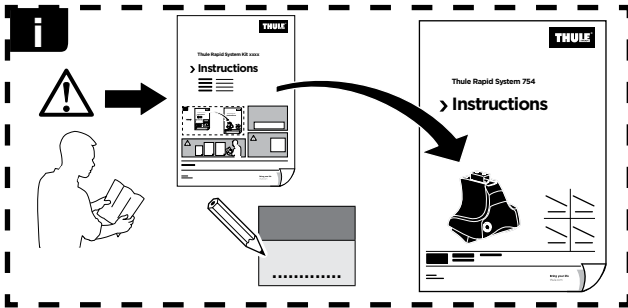


ISO 11154-E



07 x2



15 x2




781 x2



782 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-09, 10-	40	1051	41 ³ / ₈
TOYOTA Vanguard, 5-dr SUV, 07-	40	1051	41 ³ / ₈

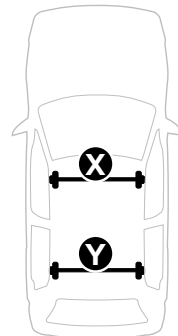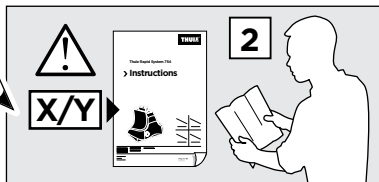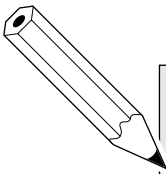


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-09, 10-	36	1011	39 ³ / ₄
TOYOTA Vanguard, 5-dr SUV, 07-	36	1011	39 ³ / ₄

2

TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-09, 10-
TOYOTA Vanguard, 5-dr SUV, 07-

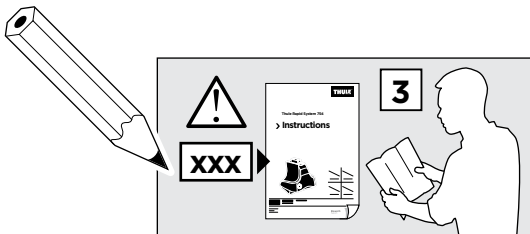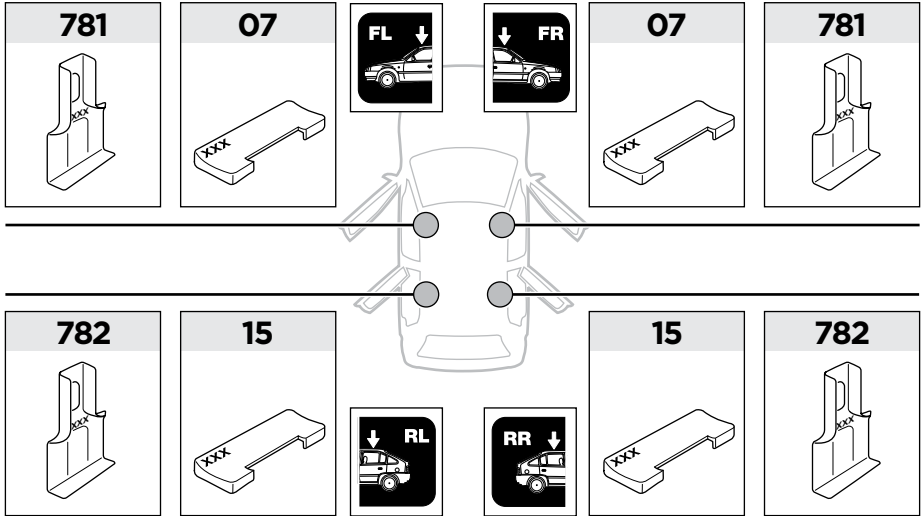

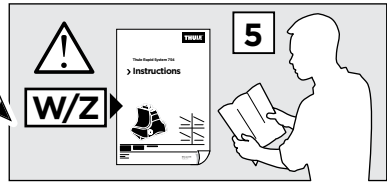3

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-09, 10-	470	710	18 1/2	28
TOYOTA Vanguard, 5-dr SUV, 07-	470	710	18 1/2	28

