




# Thule Rapid System Kit 1591

# > Instructions

**AUDI A6**, 4-dr Sedan, 04-10 / \*05-11



**AUDI S6**, 4-dr Sedan, \*05-11

\*North America

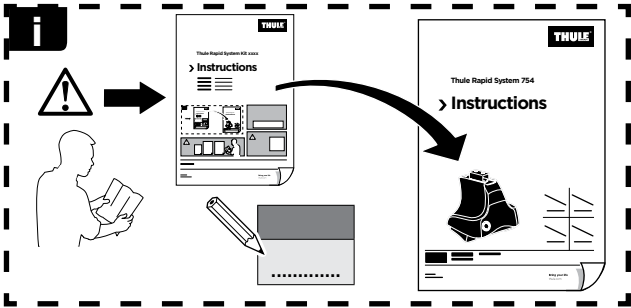

**xx kg**  
**xx lbs** + **7 kg**  
**15,4 lbs**

**= Max. 75 kg**      **Max. 165 lbs**

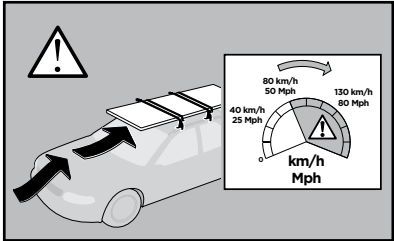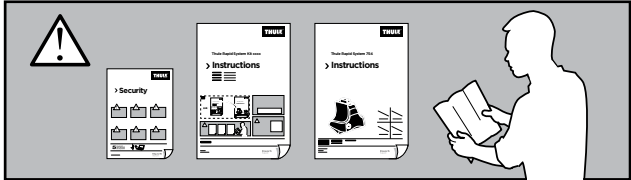


ISO 11154-E

**141591**  
C.20120524  
519-1591-02

**Bring your life**  
thule.com



29 x1



30 x1



259 x1



260 x1




911 x2



1090 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>AUDI A6</b> , 4-dr Sedan, 04-10 / *05-11	36	1011	39 <sup>3</sup> / <sub>4</sub>
<b>AUDI S6</b> , 4-dr Sedan, *05-11	36	1011	39 <sup>3</sup> / <sub>4</sub>

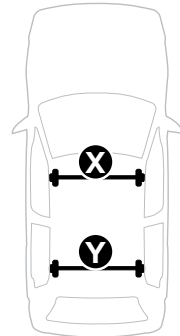
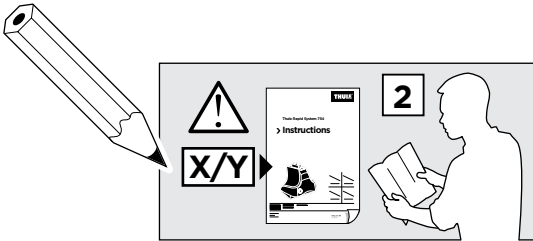



	Y (scale)	Y (mm)	Y (inch)
<b>AUDI A6</b> , 4-dr Sedan, 04-10 / *05-11	36	1011	39 <sup>3</sup> / <sub>4</sub>
<b>AUDI S6</b> , 4-dr Sedan, *05-11	36	1011	39 <sup>3</sup> / <sub>4</sub>

**2**

**AUDI A6, 4-dr Sedan, 04-10 / \*05-11**

**AUDI S6, 4-dr Sedan, \*05-11**

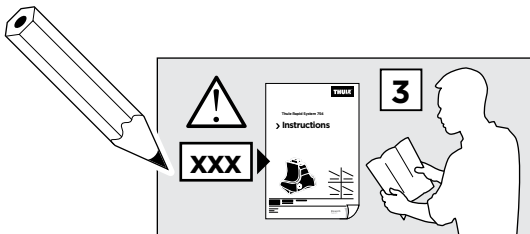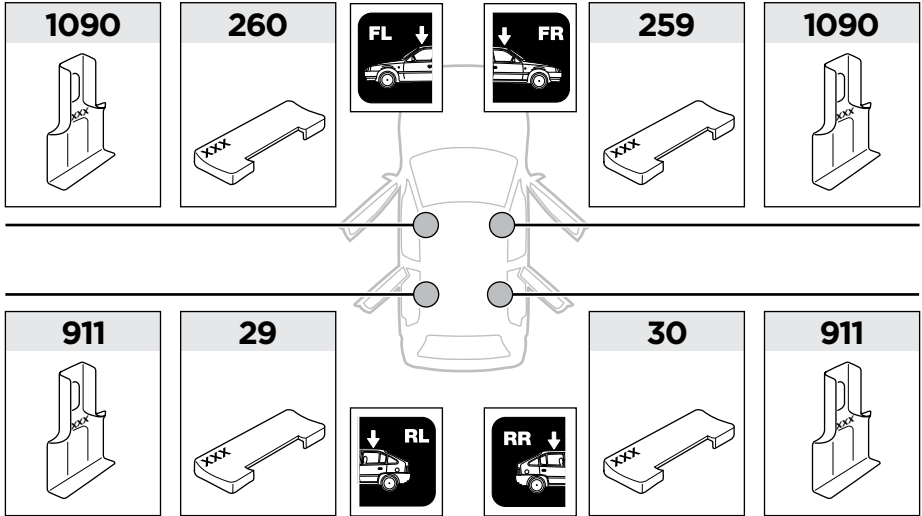

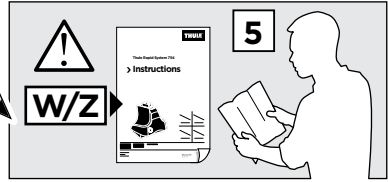**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>AUDI A6</b> , 4-dr Sedan, 04-10 / *05-11	<b>215</b>	<b>790</b>	<b>8 1/2</b>	<b>31 1/8</b>
<b>AUDI S6</b> , 4-dr Sedan, *05-11	<b>215</b>	<b>790</b>	<b>8 1/2</b>	<b>31 1/8</b>

