

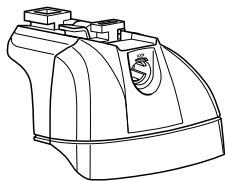


Kit 3112


LAND ROVER LR3 w/Factory Track, 5-dr SUV, 05-09
LAND ROVER LR4 w/Factory Track, 5-dr SUV, 10-
HUMMER H3 w/Factory Track, 5-dr SUV, 05-10
HUMMER H3T w/Factory Track, 4-dr Pickup, 09-10

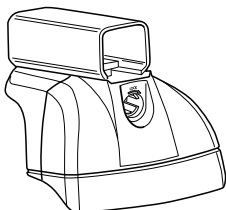

460R

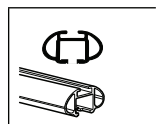


460

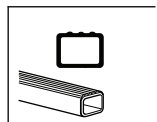


460R

460

1





460R





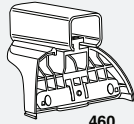


460

+

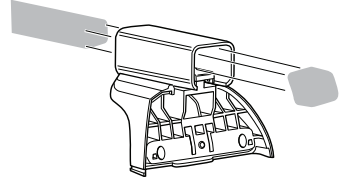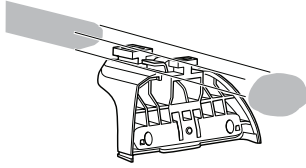



10 mm

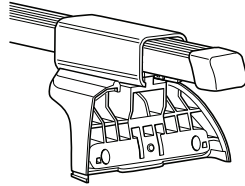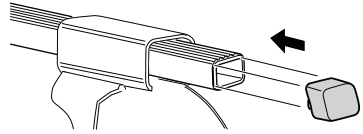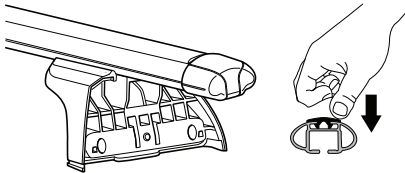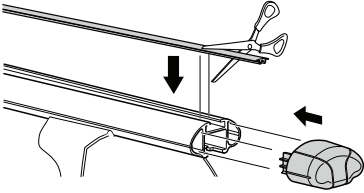



2



x4

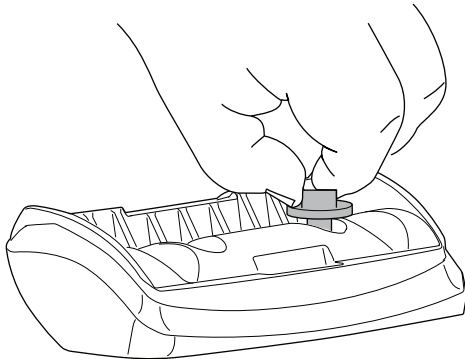


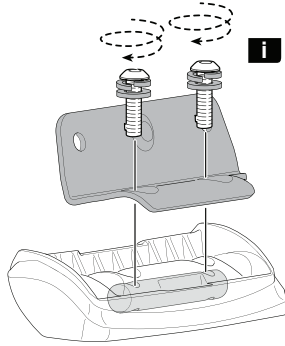3**i****i**



- GB** Only a few turns
F Quelques tours uniquement
E Sólo algunas vueltas


4

LAND ROVER LR3 w/Factory Track, 5-dr SUV, 05-09
LAND ROVER LR4 w/Factory Track, 5-dr SUV, 10–



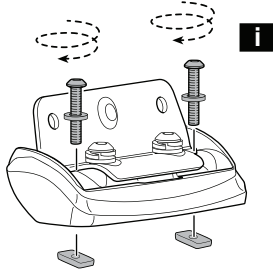
**i****i**

- GB** Only a few turns
F Quelques tours uniquement
E Sólo algunas vueltas


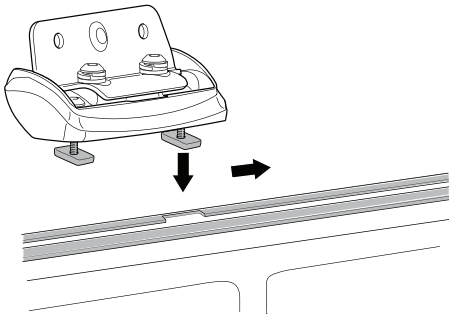
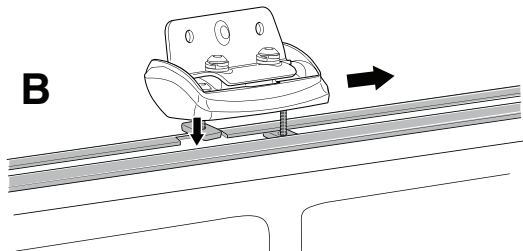
A**B**

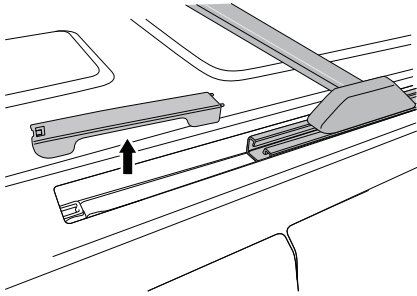4
HUMMER H3 w/Factory Track, 5-dr SUV, 05-10
HUMMER H3T w/Factory Track, 4-dr Pickup, 09-10


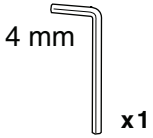
- GB** Remove factory racks.
F Retirez les barres installées en usine.
E Para sacar el portacargas de fábrica.

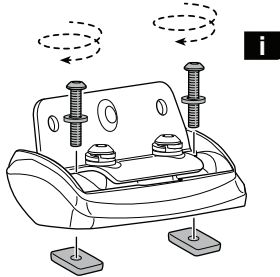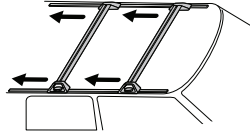

- i** **GB** Only a few turns
F Quelques tours uniquement
E Sólo algunas vueltas

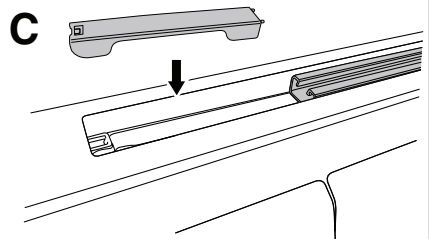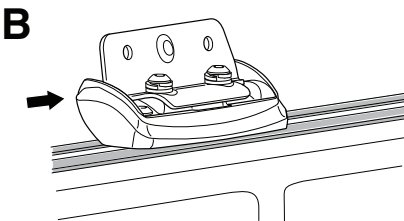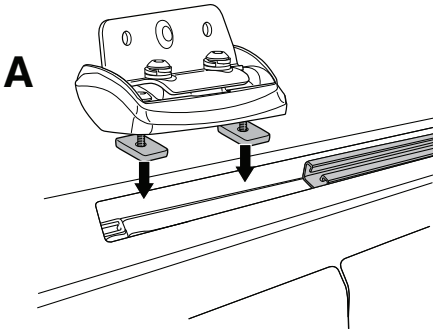


5




A

24" – 28" / 610 – 711 mm

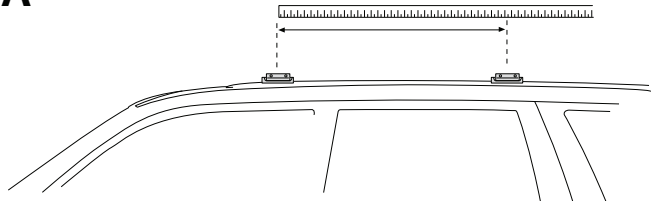


B


2.5 Nm
1.8 Ft.Lb

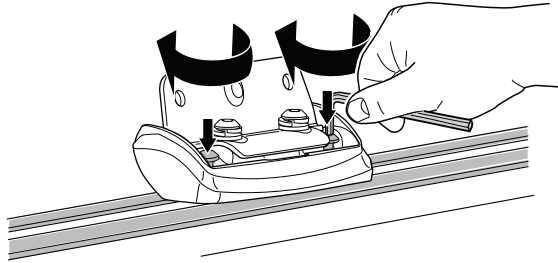


6



A




6 Nm
4.4 Ft.Lb

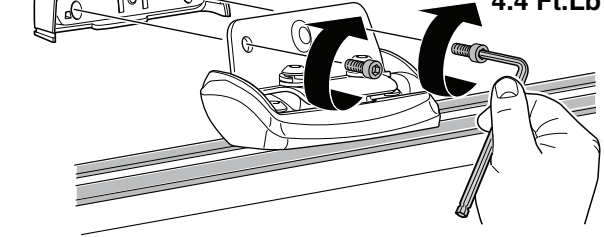

B


2.5 Nm
1.8 Ft.Lb

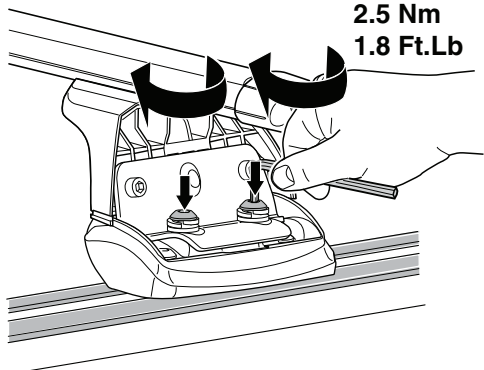

7



x1

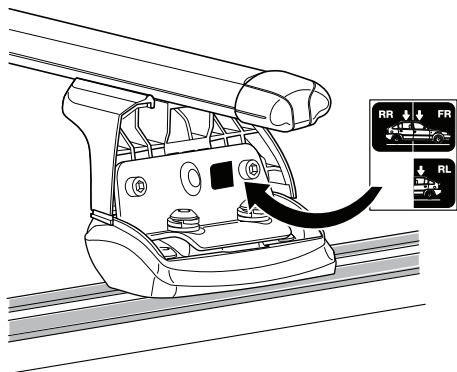


8





x4






x4

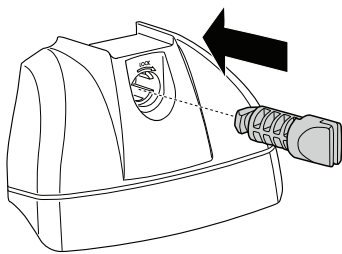


9

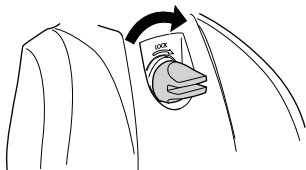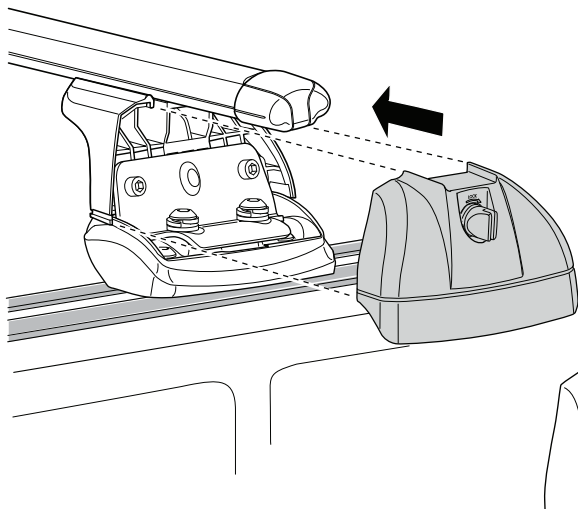

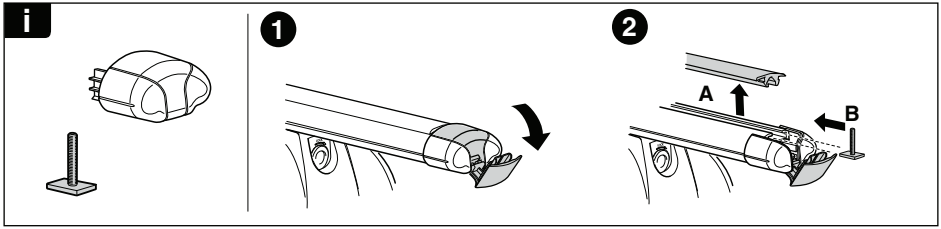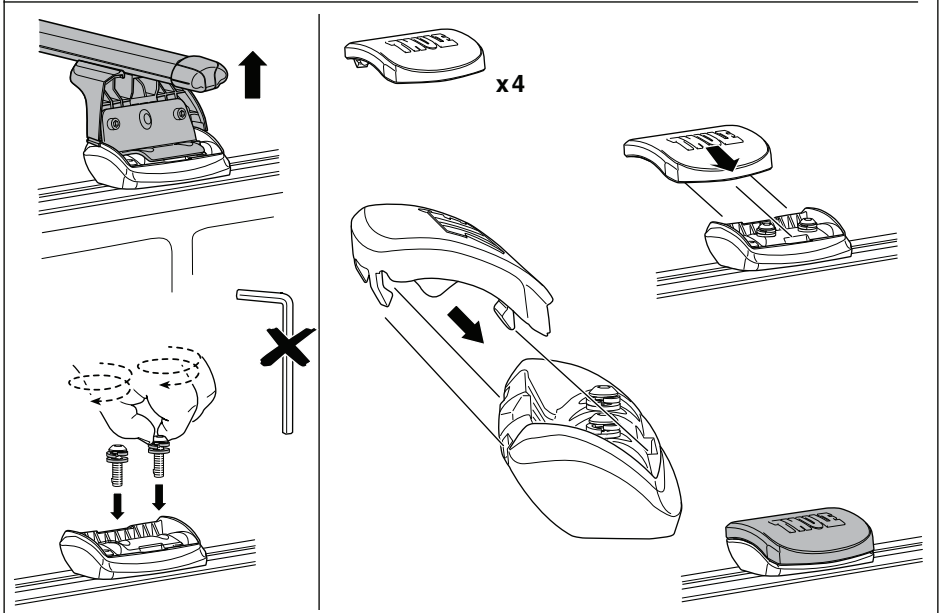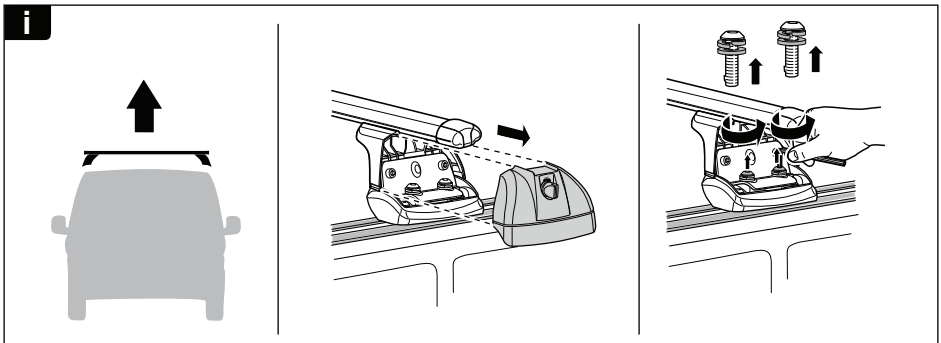

THULE
SWEDEN
**ONE
KEY
SYSTEM**

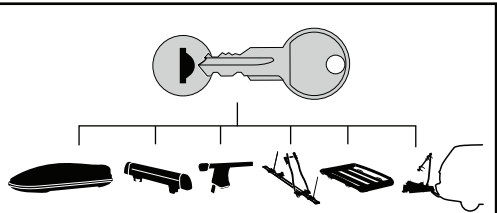

- 512** (x2)
- 544** (x4)
- 596** (x6)
- 588** (x8)