

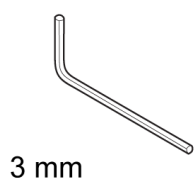
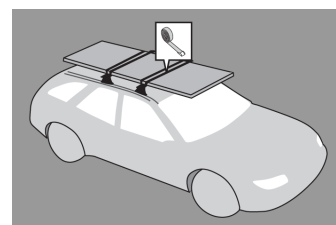
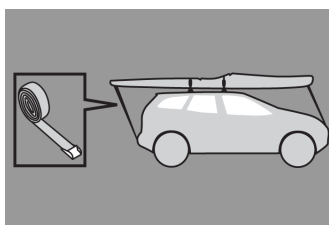
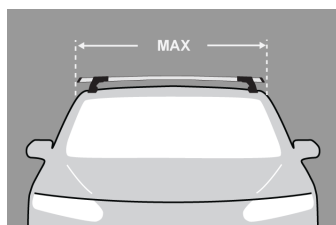


EN Fitting Instructions for Basic Carrier

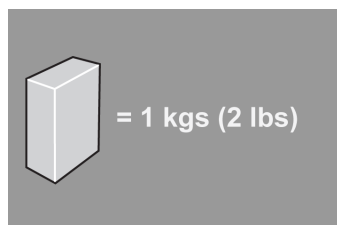


x 1

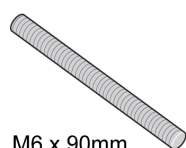


x 4




x 4

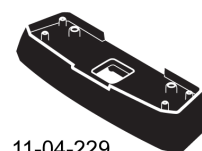


x 2

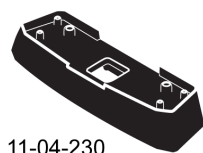

x 2

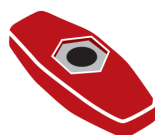





x 4

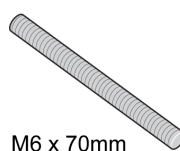

x 4



	MAX kgs (lbs)	
	W/P	WHD
BMW		
5 Series E39, 4dr Sedan 01-03	EU 75 kgs (165 lbs)	75 kgs (165 lbs)
5 Series E39, 4dr Sedan 96-03	ZA 75 kgs (165 lbs)	75 kgs (165 lbs)
5 Series E39, 4dr Sedan 97-04	US 75 kgs (165 lbs)	75 kgs (165 lbs)
5 Series E39, 4dr Sedan Apr 96-Sep 03	NZ 75 kgs (165 lbs)	75 kgs (165 lbs)
5 Series E39, 4dr Sedan Apr 96-Sep 03	AU 75 kgs (165 lbs)	75 kgs (165 lbs)
Saab		
9-3, 4dr Sedan 03-+	US 75 kgs (165 lbs)	75 kgs (165 lbs)
9-3, 4dr Sedan 03-+	NZ 75 kgs (165 lbs)	75 kgs (165 lbs)
9-3, 4dr Sedan 03-+	AU 75 kgs (165 lbs)	75 kgs (165 lbs)
9-3, 4dr Sedan 03-07	EU 75 kgs (165 lbs)	75 kgs (165 lbs)
9-3, 5dr Estate 03-07	EU 75 kgs (165 lbs)	75 kgs (165 lbs)
Mercedes-Benz		
A-Class W169, 5dr MPV 05-12	EU 75 kgs (165 lbs)	75 kgs (165 lbs)
A-Class W169, 5dr MPV 05-12	ZA 75 kgs (165 lbs)	75 kgs (165 lbs)
A-Class W169, 5dr MPV 05-12	NZ 75 kgs (165 lbs)	75 kgs (165 lbs)
A-Class W169, 5dr MPV 05-12	AU 75 kgs (165 lbs)	75 kgs (165 lbs)
A-Class W169, 5dr MPV 11-11	CN 75 kgs (165 lbs)	75 kgs (165 lbs)

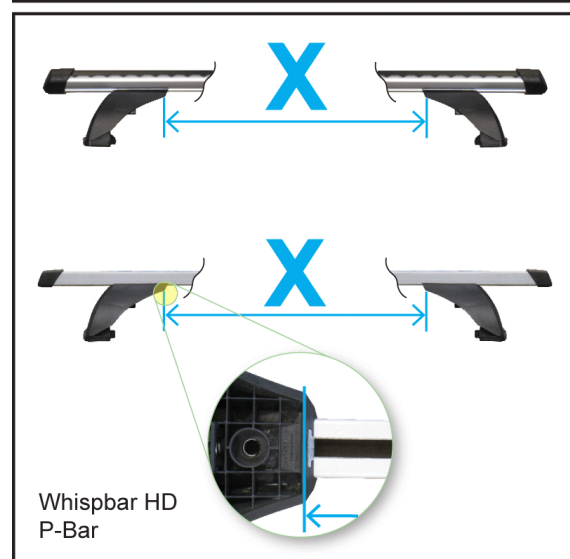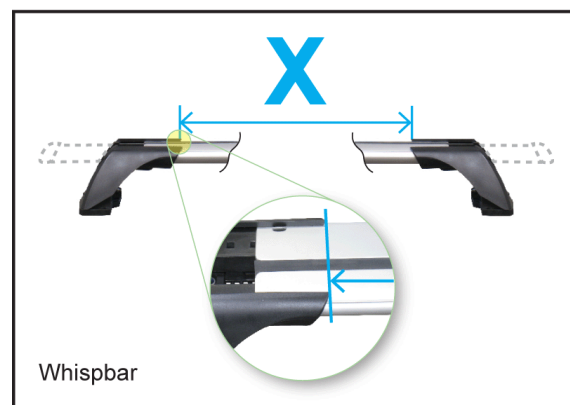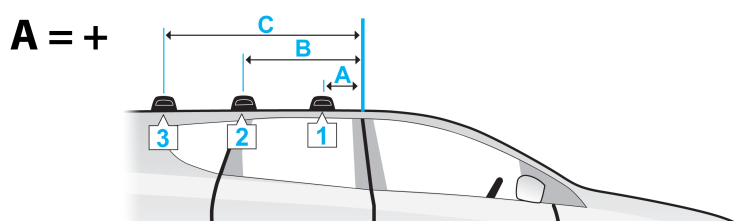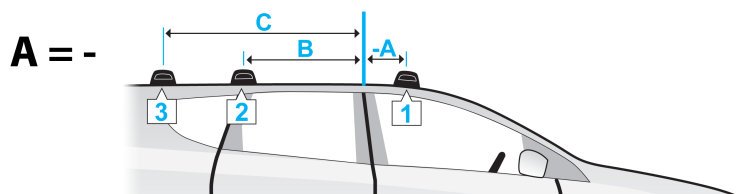


	A	B	C	X		
				1	2	3
5 Series E39, 4dr Sedan 01-03 (EU)	-260mm	450mm	-	850mm	830mm	-
	-10 -1/4ths"	17 3/4ths"	-	33 7/16ths"	32 11/16ths"	-
5 Series E39, 4dr Sedan 96-03 (ZA)	-260mm	450mm	-	850mm	830mm	-
	-10 -1/4ths"	17 3/4ths"	-	33 7/16ths"	32 11/16ths"	-
5 Series E39, 4dr Sedan 97-04 (US)	-260mm	450mm	-	850mm	830mm	-
	-10 -1/4ths"	17 3/4ths"	-	33 7/16ths"	32 11/16ths"	-
5 Series E39, 4dr Sedan Apr 96-Sep 03 (NZ)	-260mm	450mm	-	850mm	830mm	-
	-10 -1/4ths"	17 3/4ths"	-	33 7/16ths"	32 11/16ths"	-
5 Series E39, 4dr Sedan Apr 96-Sep 03 (AU)	-260mm	450mm	-	850mm	830mm	-
	-10 -1/4ths"	17 3/4ths"	-	33 7/16ths"	32 11/16ths"	-
9-3, 4dr Sedan 03-+ (US)	-320mm	490mm	-	920mm	885mm	-
	-12 -5/8ths"	19 5/16ths"	-	36 1/4ths"	34 13/16ths"	-
9-3, 4dr Sedan 03-+ (NZ)	-320mm	490mm	-	920mm	885mm	-
	-12 -5/8ths"	19 5/16ths"	-	36 1/4ths"	34 13/16ths"	-
9-3, 4dr Sedan 03-+ (AU)	-320mm	490mm	-	920mm	885mm	-
	-12 -5/8ths"	19 5/16ths"	-	36 1/4ths"	34 13/16ths"	-
9-3, 4dr Sedan 03-07 (EU)	-320mm	490mm	-	920mm	885mm	-
	-12 -5/8ths"	19 5/16ths"	-	36 1/4ths"	34 13/16ths"	-
9-3, 5dr Estate 03-07 (EU)	-320mm	490mm	-	920mm	885mm	-
	-12 -5/8ths"	19 5/16ths"	-	36 1/4ths"	34 13/16ths"	-
A-Class W169, 5dr MPV 05-12 (EU)	-320mm	310mm	-	890mm	800mm	-
	-12 -5/8ths"	12 3/16ths"	-	35 1/16ths"	31 1/2ths"	-
A-Class W169, 5dr MPV 05-12 (ZA)	-320mm	310mm	-	890mm	800mm	-
	-12 -5/8ths"	12 3/16ths"	-	35 1/16ths"	31 1/2ths"	-
A-Class W169, 5dr MPV 05-12 (NZ)	-320mm	310mm	-	890mm	800mm	-
	-12 -5/8ths"	12 3/16ths"	-	35 1/16ths"	31 1/2ths"	-
A-Class W169, 5dr MPV 05-12 (AU)	-320mm	310mm	-	890mm	800mm	-
	-12 -5/8ths"	12 3/16ths"	-	35 1/16ths"	31 1/2ths"	-
A-Class W169, 5dr MPV 11-11 (CN)	-320mm	310mm	-	890mm	800mm	-
	-12 -5/8ths"	12 3/16ths"	-	35 1/16ths"	31 1/2ths"	-

First Time Installation



- Remove parts from inside the package and check. Contact your dealer if any parts are missing or damaged.

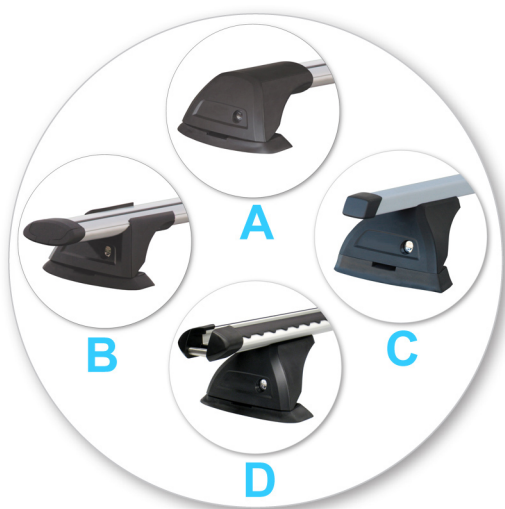

- This kit fits type A, B, C and D.
- These instructions show type A crossbar fitted. They also apply to type B, C and D.




- Use keys to remove covers.



- Use hex screwdriver to reverse adjusting screw 10 turns.




- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment method.
- Ensure each end of the crossbar is adjusted equally.

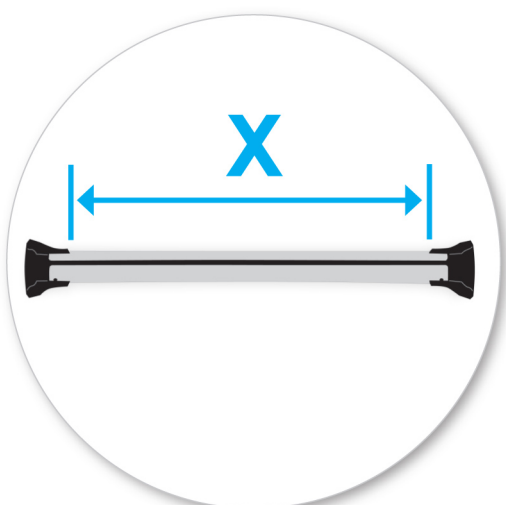

- Adjust crossbar in or out to suit vehicle. Refer to the crossbar instructions for crossbar adjustment.
- Attaches to factory-fitted mounting points
- Please check the front of this manual for information relating specifically to your vehicle.



- Tighten adjusting screw to 5 Nm (3.7 ft lb) hand tight.

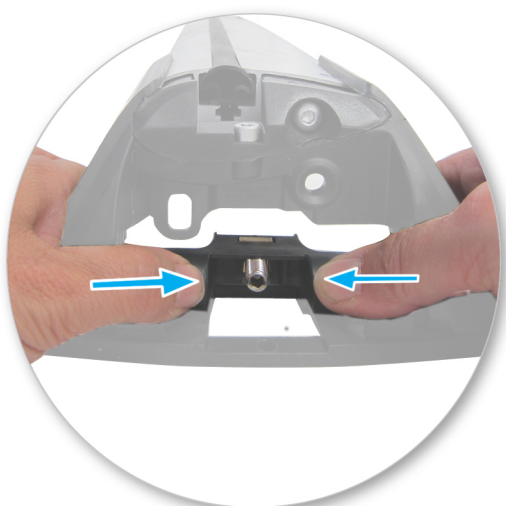

- Remove plastic clamp block by gripping bar leg with fingers and push firmly with thumbs until clamp block drops out behind leg.




- Select plastic internal block (from fitting kit) and insert into foot.
- Repeat for all legs.

Fitment




- Open or remove fixed-point covers.

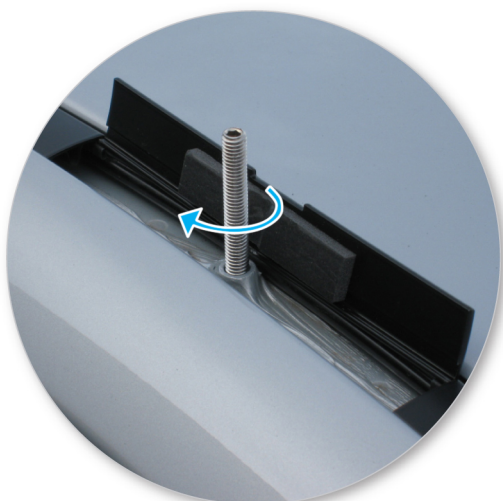

- Grubscrew length:
BMW = 70mm (2 3/4")
Saab = 90mm (3 1/2")
- Select four grubscrews and screw them into the vehicle's fixed points.
- Do not over tighten.



- Fit rubber pads (supplied with fitting kit) to foot. Pad may vary in shape to that shown.
- Refer to the underside of the pad for the part number.

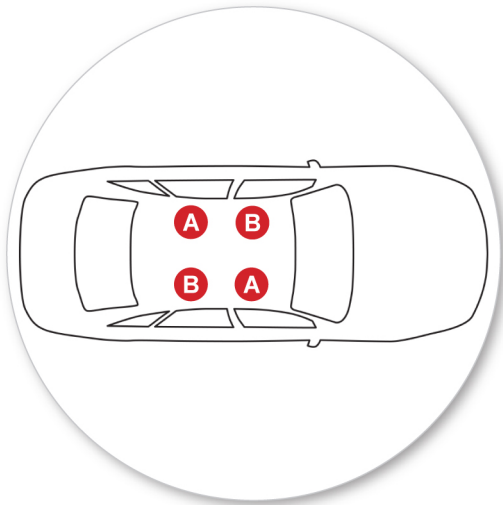

- Letters refer to the pad part numbers and position.
- Pad Part Number:
A = 11-04-229
B = 11-04-230



- Ensure the fixed-point covers sit vertically in the recess in the pads.




- Place crossbars on pads ensuring the pads fit into the holes underneath the foot and the grub screw passes through the hole in the foot.
- Repeat for all four positions.



- Tighten the plastic knob. The side with the nut showing should be facing up.



- Ensure the plastic knob is in the position shown when fully tightened.
- Repeat for all legs.

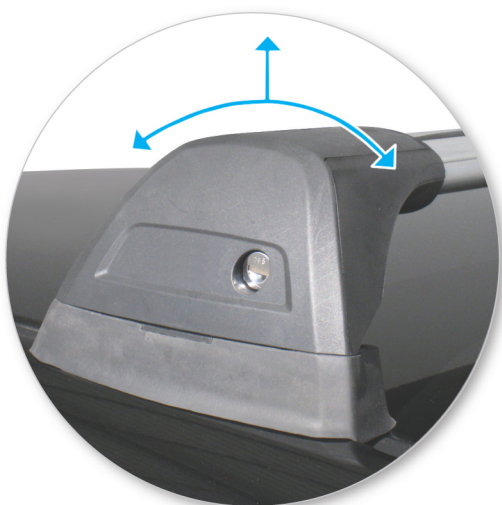

- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

**CAUTION: Recheck all fasteners immediately after a load is applied to the crossbars.
Regularly check screws are tight.**

Maintenance

- Clean the car roof and surfaces of the product that will be in contact with the car roof.
- Follow the fitting instructions for fitting the product to your vehicle. Make sure all steps are carried out in order.
- Set crossbars a minimum distance of 700mm (27 1/2") apart where no other distance is specified in the fitting instructions. This is especially important when carrying long loads.
- Check unit is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Some glass/panoramic roofs and radio antennae may not be able to be used when the product is fitted.
- Do not modify this product.
- Refer to the maximum permitted load capacity specified in the fitting instructions. Do not exceed the vehicle manufacturers roof load rating if it is lower than the maximum load capacity specified in the fitting instructions.
- Loads should not overhang the sides of the product and be evenly distributed with the lowest possible centre of gravity.
- Long loads should be secured with non-elastic straps to the front and rear of the vehicle.
- Objects with pointed ends (e.g. ski poles) should be carried with the pointed ends to the rear of the vehicle.
- Remove all loose or removable objects from the load prior to loading.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.
- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.
- Note that the total height of the vehicle increases when upright loads are carried.
- Products should be locked during transport if they have locks fitted.

- Check and replace worn out or defective parts.
 - Keep the product clean and maintained.
 - Never drive into a car wash with the roof rack system fitted.
 - Lubricate locks and adjusting screws at regular intervals.
 - Remove the products from the vehicle when not in use. Make sure all loose parts are stored safely.
-

- Yakima Products, Inc.
4101 Kruse Way,
Lake Oswego, OR 97035
USA

www.whispbar.com
www.whispbar.ca
