
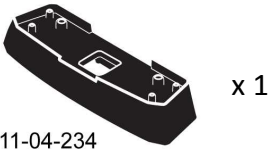
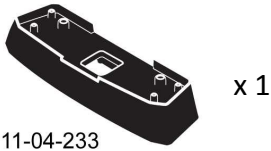
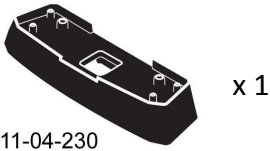
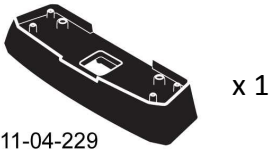
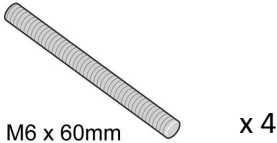
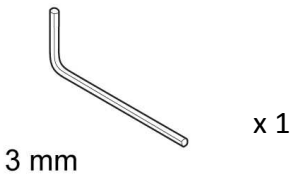
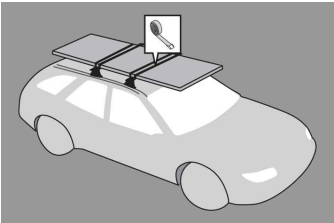
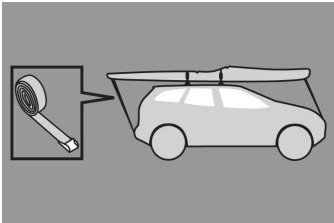
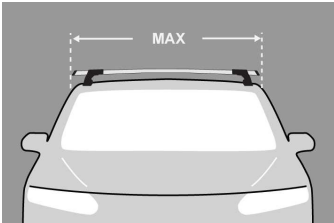


EN Fitting Instructions for Basic Carrier

Attention: Not suitable for
Glass/Panoramic roof model

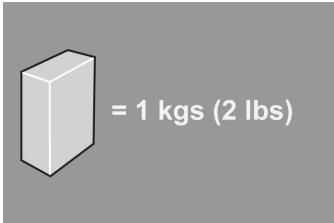

+ +




= MAX
kgs (lbs)



Mercedes

- C-Class W204, 4dr Sedan 07-13
- C-Class W204, 4dr Sedan Jul 07-08
- C-Class W204, 4dr Sedan Jul 07-13
- C-Class W204, 4dr Sedan Jul 07-13
- C-Class W204, 4dr Sedan Jul 07-13
- C-Class, 4dr Sedan 07-13
- E-Class W212, 4dr Sedan 09-Aug 16
- E-Class W212, 4dr Sedan 09-Aug 16
- E-Class W212, 4dr Sedan 09-May 16
- E-Class W212, 4dr Sedan 09-May 16
- E-Class W212, 4dr Sedan 09-May 16
- E-Class W212, 4dr Sedan 10-10

Flag	MAX kgs (lbs)	
	W/P	WHD
US	75 kgs (165 lbs)	75 kgs (165 lbs)
CN	75 kgs (165 lbs)	75 kgs (165 lbs)
NZ	75 kgs (165 lbs)	75 kgs (165 lbs)
AU	75 kgs (165 lbs)	75 kgs (165 lbs)
EU	75 kgs (165 lbs)	75 kgs (165 lbs)
ZA	75 kgs (165 lbs)	75 kgs (165 lbs)
ZA	75 kgs (165 lbs)	100 kgs (220 lbs)
US	75 kgs (165 lbs)	100 kgs (220 lbs)
NZ	75 kgs (165 lbs)	100 kgs (220 lbs)
AU	75 kgs (165 lbs)	100 kgs (220 lbs)
EU	75 kgs (165 lbs)	100 kgs (220 lbs)
CN	75 kgs (165 lbs)	100 kgs (220 lbs)

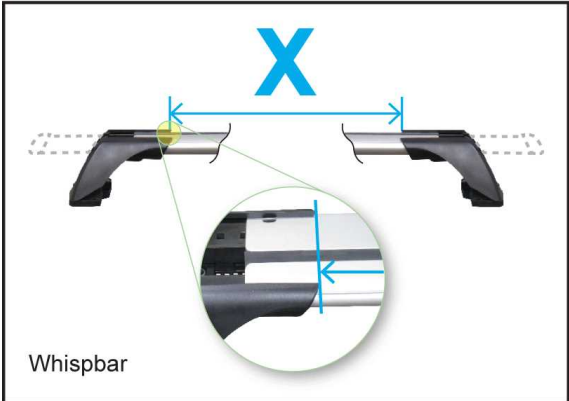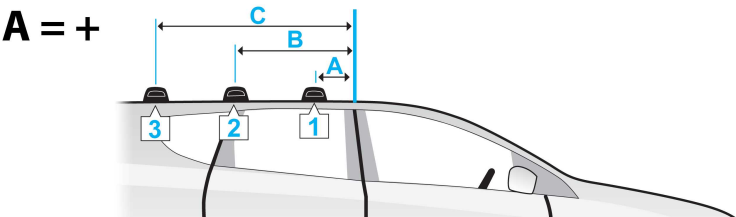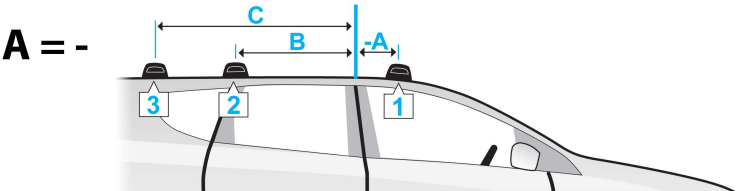

Whispbar



Whispbar HD
P-Bar

C-Class W204, 4dr Sedan 07-13 (US)

C-Class W204, 4dr Sedan Jul 07-08 (CN)

C-Class W204, 4dr Sedan Jul 07-13 (NZ)

C-Class W204, 4dr Sedan Jul 07-13 (AU)

C-Class W204, 4dr Sedan Jul 07-13 (EU)

C-Class, 4dr Sedan 07-13 (ZA)

E-Class W212, 4dr Sedan 09-Aug 16 (ZA)

E-Class W212, 4dr Sedan 09-Aug 16 (US)

E-Class W212, 4dr Sedan 09-May 16 (NZ)

E-Class W212, 4dr Sedan 09-May 16 (AU)

E-Class W212, 4dr Sedan 09-May 16 (EU)


E-Class W212, 4dr Sedan 10-10 (CN)

A	B	C	X		
			1	2	3
-350mm	410mm	-	880mm	845mm	-
-13 -3/4ths"	16 1/8ths"	-	34 5/8ths"	33 1/4ths"	-
-350mm	410mm	-	880mm	845mm	-
-13 -3/4ths"	16 1/8ths"	-	34 5/8ths"	33 1/4ths"	-
-350mm	410mm	-	880mm	845mm	-
-13 -3/4ths"	16 1/8ths"	-	34 5/8ths"	33 1/4ths"	-
-350mm	410mm	-	880mm	845mm	-
-13 -3/4ths"	16 1/8ths"	-	34 5/8ths"	33 1/4ths"	-
-350mm	410mm	-	880mm	845mm	-
-13 -3/4ths"	16 1/8ths"	-	34 5/8ths"	33 1/4ths"	-
-370mm	380mm	-	940mm	890mm	-
-14 -9/16ths"	14 15/16ths"	-	37"	35 1/16ths"	-
-370mm	380mm	-	940mm	890mm	-
-14 -9/16ths"	14 15/16ths"	-	37"	35 1/16ths"	-
-370mm	380mm	-	940mm	890mm	-
-14 -9/16ths"	14 15/16ths"	-	37"	35 1/16ths"	-
-370mm	380mm	-	940mm	890mm	-
-14 -9/16ths"	14 15/16ths"	-	37"	35 1/16ths"	-
-370mm	380mm	-	940mm	890mm	-
-14 -9/16ths"	14 15/16ths"	-	37"	35 1/16ths"	-

First Time Installation



- Remove parts from inside the package and check. Contact your dealer if any parts are missing or damaged.

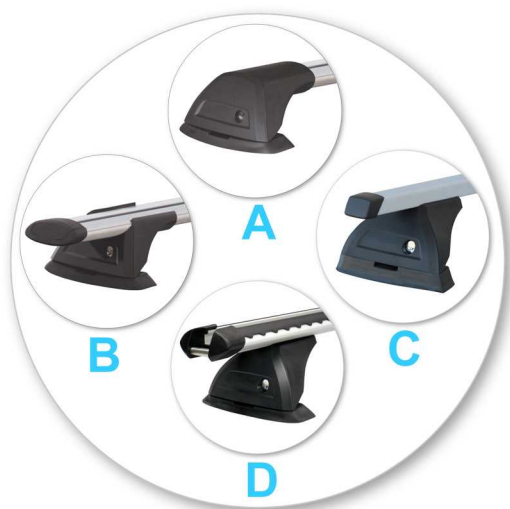

- This kit fits type A, B, C and D.
- These instructions show type A crossbar fitted. They also apply to type B, C and D.




- Use keys to remove covers.



- Use hex screwdriver to reverse adjusting screw 10 turns.




- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment method.
- Ensure each end of the crossbar is adjusted equally.

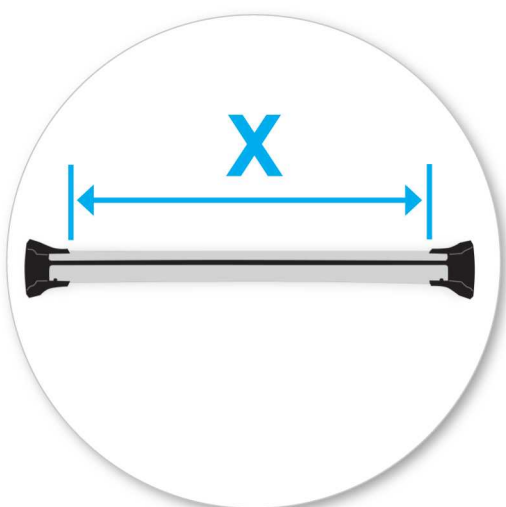

- Adjust crossbar in or out to suit vehicle. Refer to the crossbar instructions for crossbar adjustment.
- Please check the front of this manual for information relating specifically to your vehicle.



- Tighten adjusting screw to 5 Nm (3.7 ft lb) hand tight.

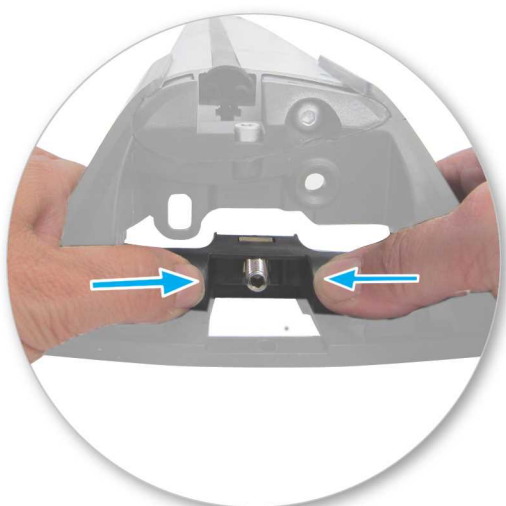

- Remove plastic clamp block by gripping bar leg with fingers and push firmly with thumbs until clamp block drops out behind leg.




- Select plastic internal block (from fitting kit) and insert into foot.
- Repeat for all legs.

Fitment

- Open or remove fixed-point covers.



- Select four grubscrews and assemble them into the adaptor using 3 mm (1/8") Hex Key.

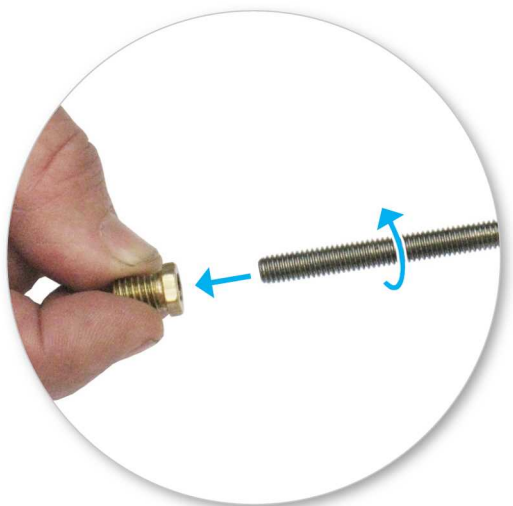


- Select grubscrews and screw into the vehicle's fixed points.
- Do not over tighten.
- Repeat for all four positions.





- Fit rubber pads (supplied with fitting kit) to foot. Pad may vary in shape to that shown.

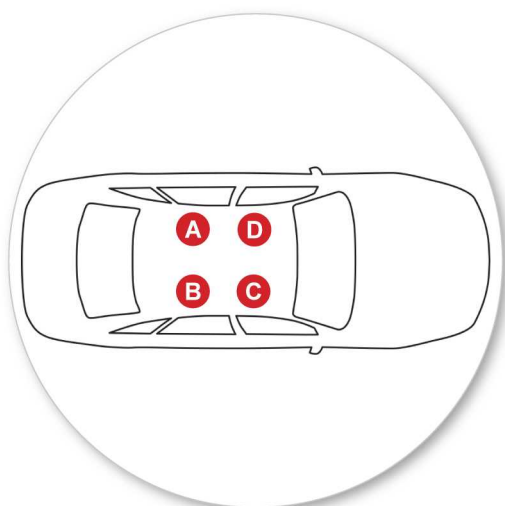

- Letters refer to the pad part numbers and position.
- Pad Part Number:
A = 229
B = 230
C = 233
D = 234



- Ensure the fixed-point covers sit vertically in the recess in the pads.




- Place crossbars on pads ensuring the pads fit into the holes underneath the foot and the grub screw passes through the hole in the foot.



- Tighten the plastic knob. The side with the nut showing should be facing up.



- In the fully tightened position, the knobs should be parallel with the vehicle.
- Repeat for all four positions.

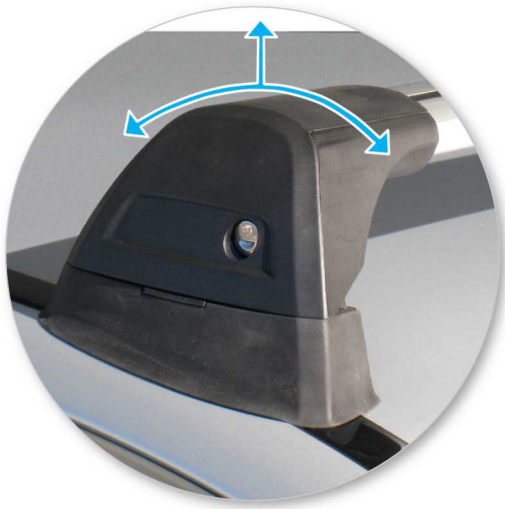

- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

CAUTION: Recheck all fasteners immediately after a load is applied to the crossbars. Regularly check screws are tight.

Maintenance

- Clean the car roof and surfaces of the product that will be in contact with the car roof.
- Follow the fitting instructions for fitting the product to your vehicle. Make sure all steps are carried out in order.
- Set crossbars a minimum distance of 700mm (27 1/2") apart where no other distance is specified in the fitting instructions. This is especially important when carrying long loads.
- Check unit is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Some glass/panoramic roofs and radio antennae may not be able to be used when the product is fitted.
- Do not modify this product.
- Refer to the maximum permitted load capacity specified in the fitting instructions. Do not exceed the vehicle manufacturers roof load rating if it is lower than the maximum load capacity specified in the fitting instructions.
- Loads should not overhang the sides of the product and be evenly distributed with the lowest possible centre of gravity.
- Long loads should be secured with non-elastic straps to the front and rear of the vehicle.
- Objects with pointed ends (e.g. ski poles) should be carried with the pointed ends to the rear of the vehicle.
- Remove all loose or removable objects from the load prior to loading.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.
- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.
- Note that the total height of the vehicle increases when upright loads are carried.
- Products should be locked during transport if they have locks fitted.

- Check and replace worn out or defective parts.
 - Keep the product clean and maintained.
 - Never drive into a car wash with the roof rack system fitted.
 - Lubricate locks and adjusting screws at regular intervals.
 - Remove the products from the vehicle when not in use. Make sure all loose parts are stored safely.
-

- Yakima Europe Coöperatief U.A.
Archimedesbaan 25
3439 ME Nieuwegein
The Netherlands

+31 2080 81425

www.whispbar.eu
www.whispbar.co.uk

- Yakima Products, Inc.
15025 SW Koll Pkwy.
Beaverton, OR 97006-6056
USA

www.whispbar.com
www.whispbar.ca
