


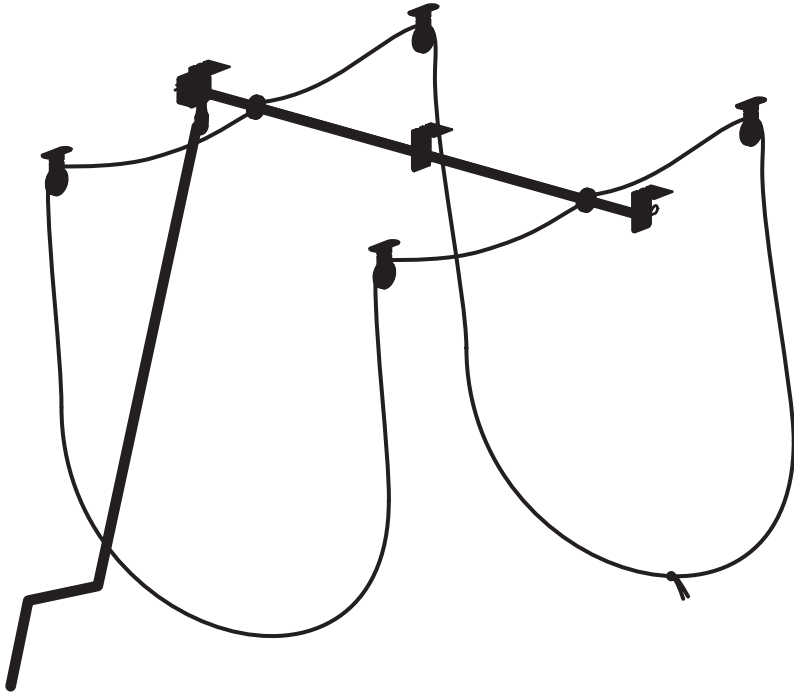
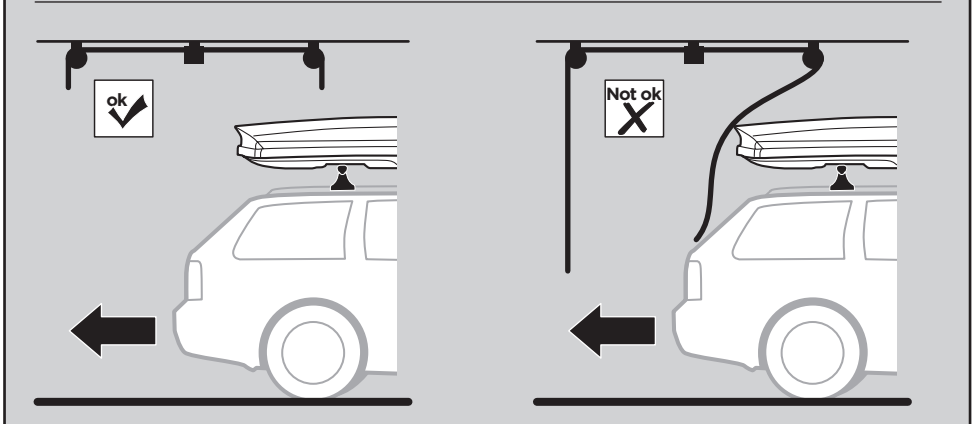
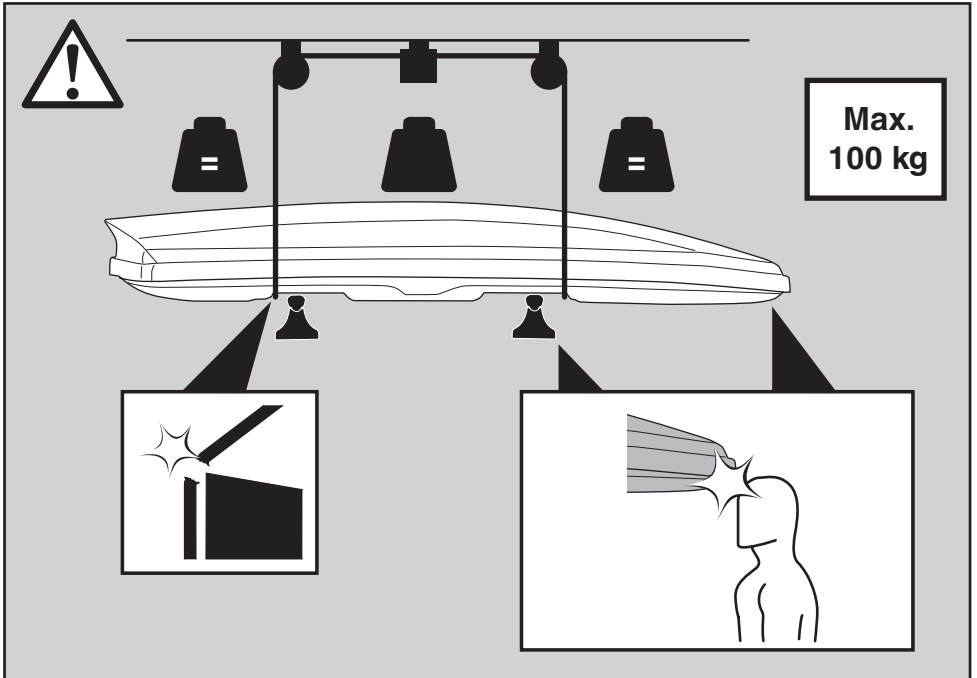
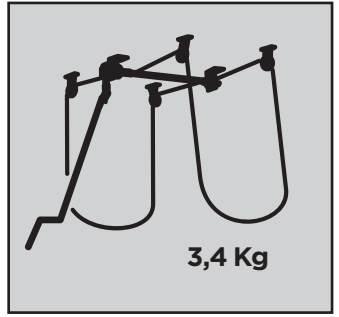





Thule MultiLift 572



➤ Instructions

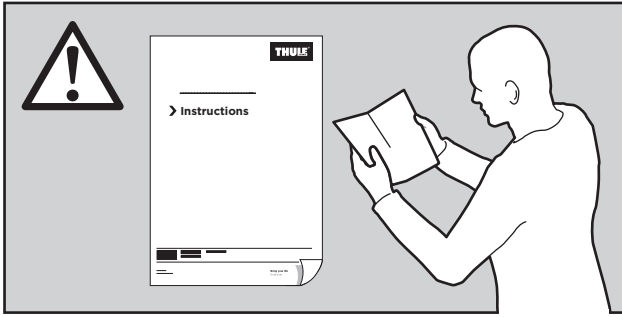

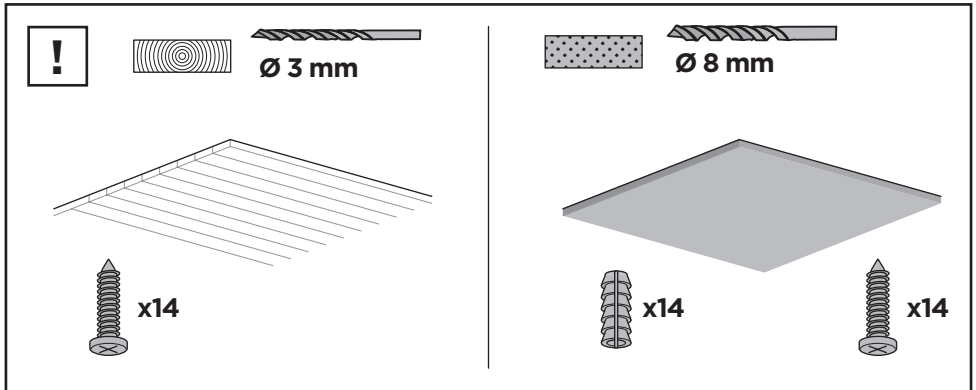

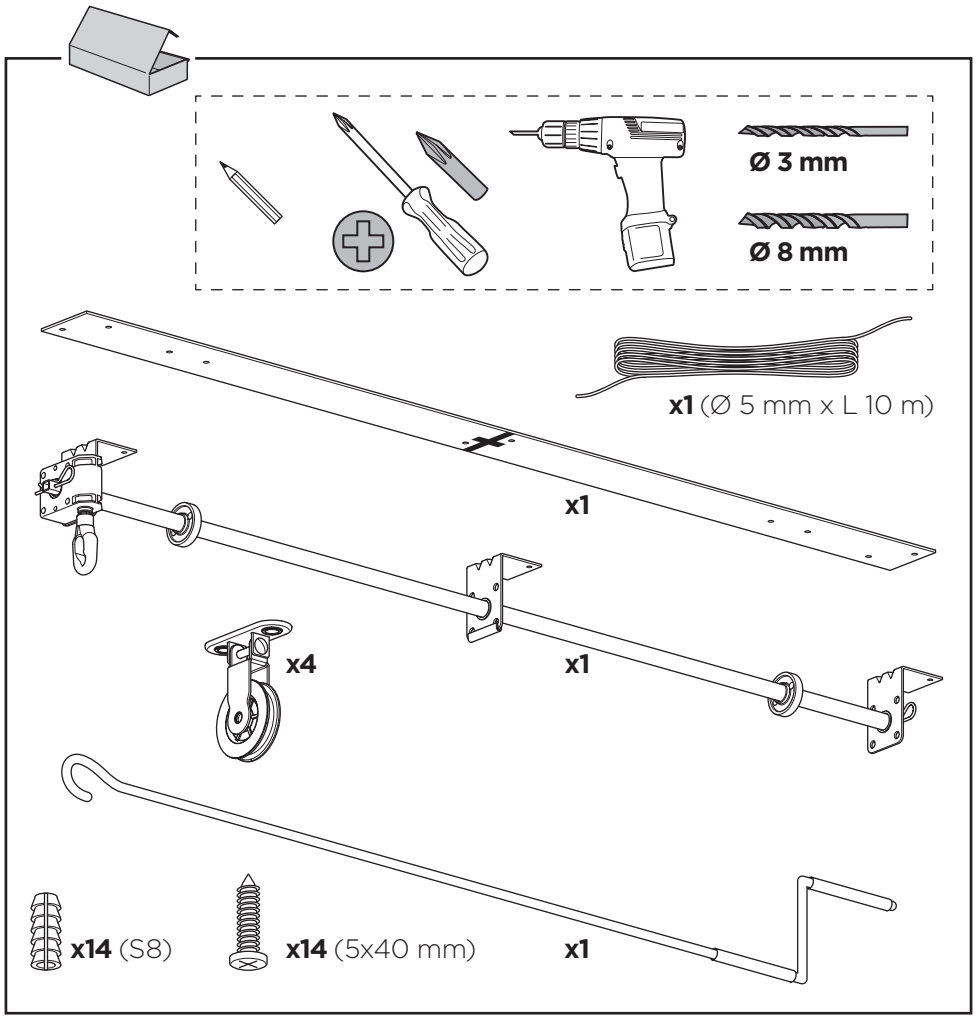

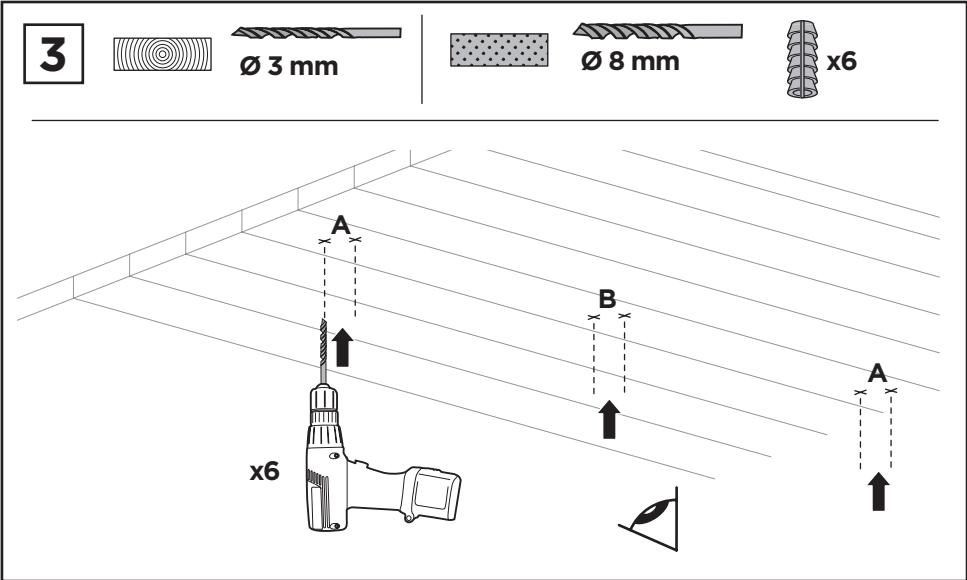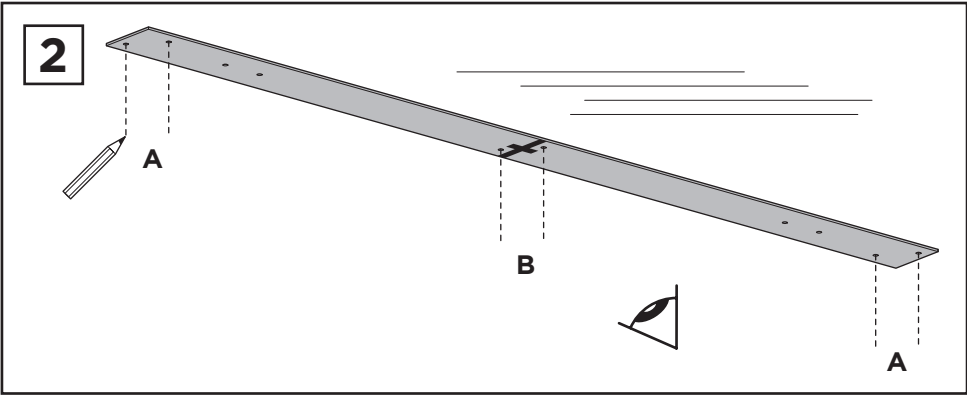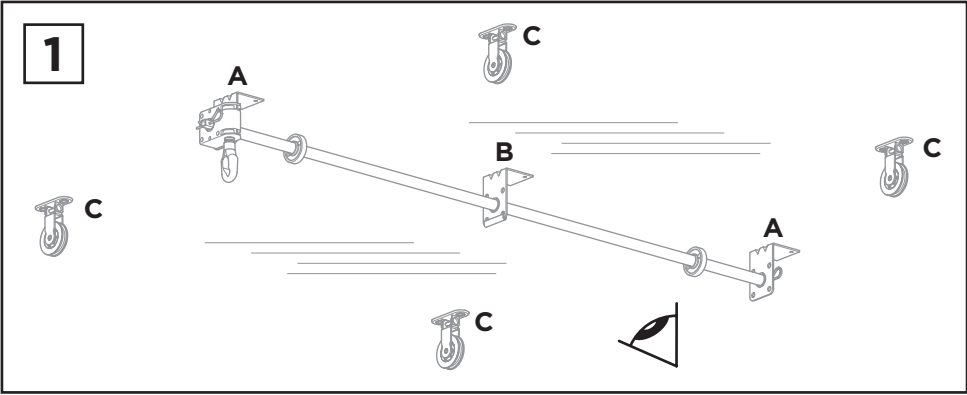


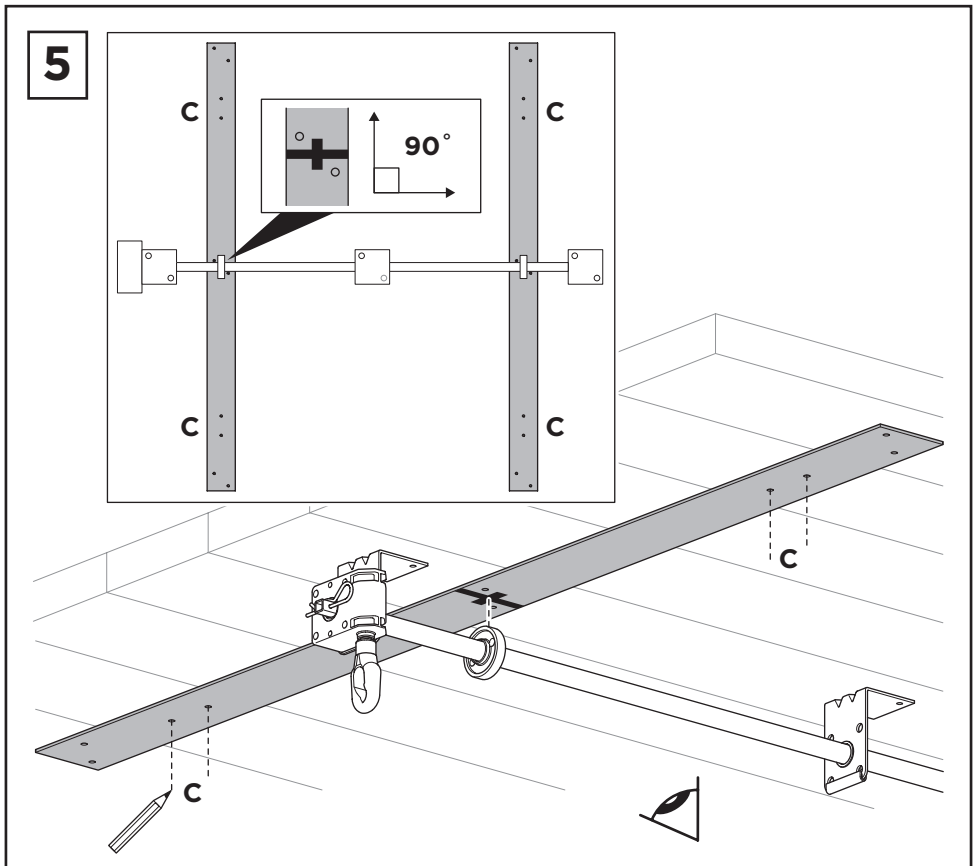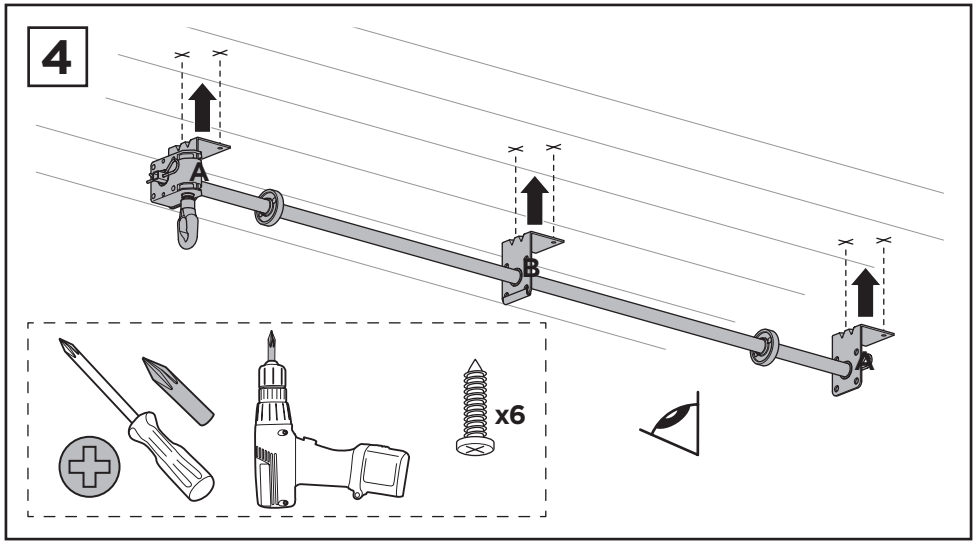

6




Ø 3 mm




Ø 8 mm





x8

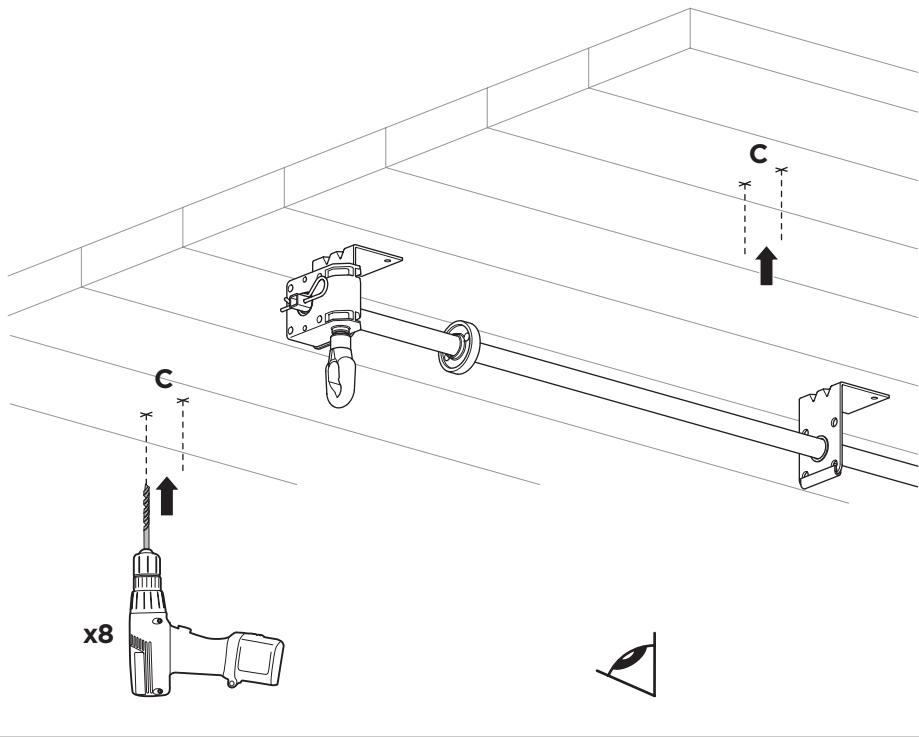

7



x4

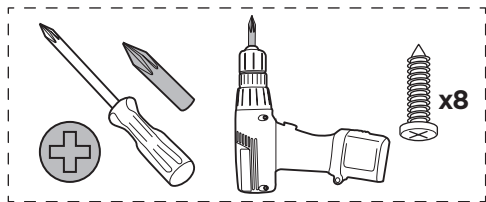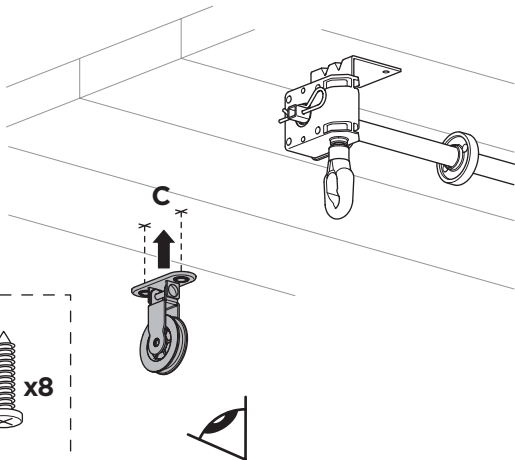

8

