

### **IDENTIFICATION CHART**







							VA Cross	VA Crossbar		EURU Crossbar			HD Crosspar	
			FRONT CROSSBAR			OSSBAR					REAR CROSSBAR			
					VA	EURO	HD				VA	EURO	HD	
Vehicle	Date	Crossbar	Front Right Pad/Clamp	Front Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction	Rear Right Pad/Clamp	Rear Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction
Mazda CX-30 DM Gen 1 5dr SUV	2019 -	1180mm	M282 SUB0655	M281 SUB0655	203 mm	148 mm	974 mm 38,11/32"	M311	M284 SUB0837	M283 SUB0837		103 mm	884 mm 34,13/16" ·	M311
			Pad Arrow FORWARD	Pad Arrow FORWARD				OUT	Pad Arrow FORWARD	Pad Arrow FORWARD				OUT





## DK513 VA, Aero, Euro & HD Crossbar Instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

**Measurement B**: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

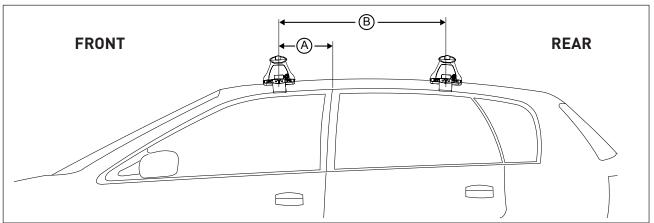

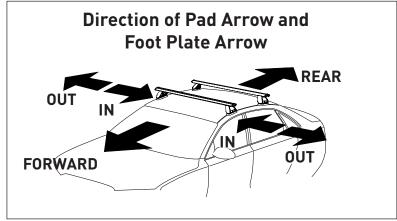

# FRONT REAR RIGHT FRONT REAR LEFT

## NOTE:

Please refer to page 3 for measurements relating to the images on this page.



# **DK513** VA, Aero, Euro & HD Crossbar Instruction

**Measurement A**: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

VEHICLE	Date	Measurement A	Measurement B	System Load Rating (includes racks 5kg/ 11lbs) (2.5kg / 5lbs for front/rear bar only)		
Mazda CX-30 DM Gen 1 5dr SUV	2019 -	200mm 7, 7/8"	675mm 26, 9/16"	Up to 75kg / 165lbs*		

Document No. 520-RFI-00042 Issue 1: 01 Jul 2021 Page 3 of 3

<sup>\*</sup>System Load Rating: Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.